Roosevelt 29 Direct Vent Insert



Please leave these reference guides at the installation location until the installation is finished. See owners manual for full installation and finishing instructions before making final decisions as information is subject to change.


Specifications (all measurements are in inches)

• GAS LINE OPENING: LEFT (BACK, UPPER CORNER) • ELECTRICAL ACCESS: LEFT SIDE


Model	ВТИ	Front Height	Back Height	Front Width	Back Width	Depth	Glass Viewing Area
RVT-29	30,000	19-7/8	17-1/4	29-5/8	20-1/16	16	25-1/8 x 15-1/2

Existing Fireplace Opening Requirements

Mantel & Hearth Clearances

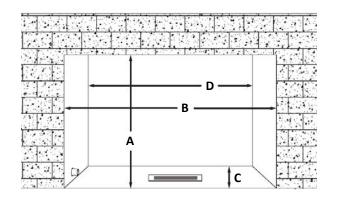


Dimension	RVT-29	
А	20	
В	29-3/4	
С	16	
D	20-3/8	

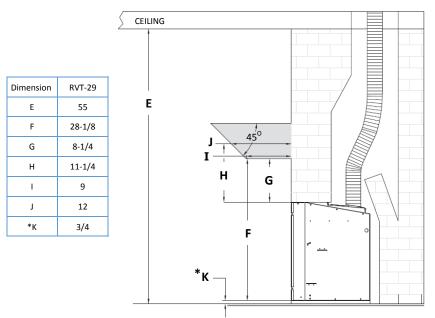

*Required when installing on combustible flooring using floor protector (#RT29-FLP)


Shroud Sizes*

Venting Requirements

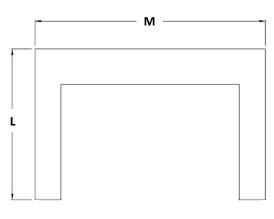

	Shroud Part Number					
Dimension	#RT29-2538	#RT29-27542	#RT29-3044			
L	25	27-1/2	30			
М	38	42	44			

*Custom Sizes also available

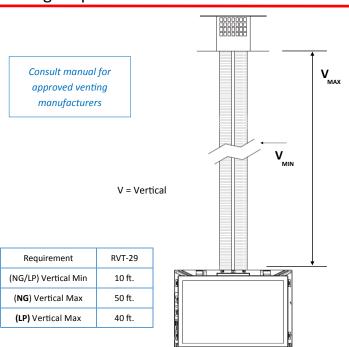

Curing, & Homeowner Osage Tips	FIREPLACES
Wall Temperatures	
Fireplace Curing	
Continuous (IPI) vs Standing Pilot	
Battery Backup Location	
Batter, Battap Location	

Curing 9. Homoownor Usago Tir