


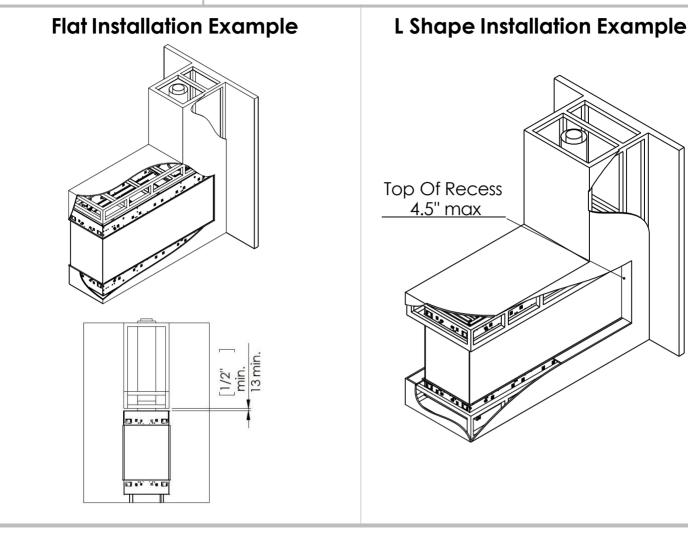

Flat Vs. L Shape Installation For Flare Front Fireplace



Heat Release and Air Intakes

The following sizes MUST be maintained for the upper heat release:

For fireplaces sized **80" & 100"**– vent area must be at least **200** square inches.

For fireplaces sized **60**" **& 70**" - vent area must be at least **140** square inches.

For fireplace sized **50**" and below - vent area must be at least **100** square inches.

The following sizes MUST be maintained for the lower air intake: For fireplaces sized 80" & 100" – vent area must be at least 100 square inches.

For fireplaces sized **60**" & **70**" - vent area must be at least **70** square inches.


For fireplaces sized **50**" and below - vent area must be at least **50** square inches.


For See Through and Room Definer fireplaces, the air intake requirements are **double**.

NOTE: Openings above for Heat Release and Air Intake are measured for open air space.

NOTE: On all See Through and Room Definer units the air intake must be doubled

Top Shadow Line

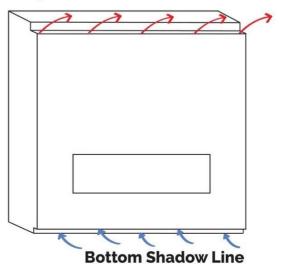

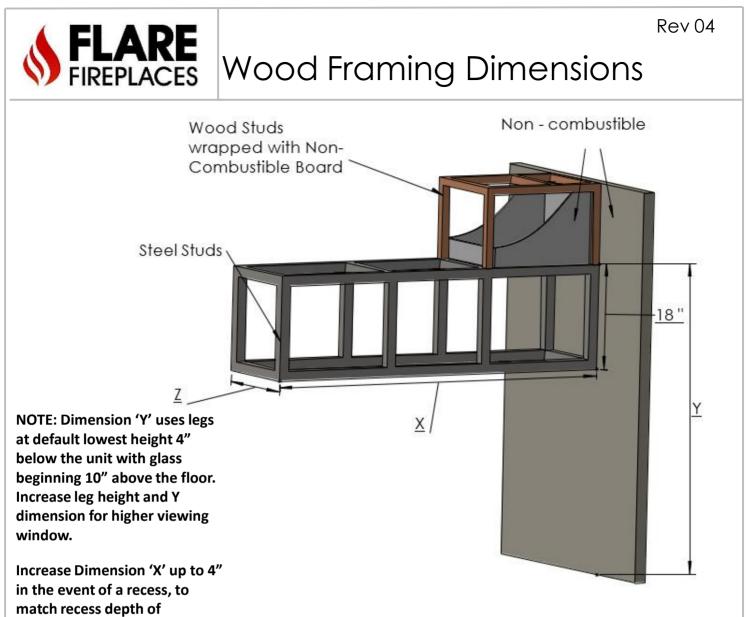

Dimension 'Z'.

		v	v	Z	
		X	Y	Flat Installation	Recess Installation (4" Max)
45	Inch	49 5/16	51 4/16	19 15/16	27 15/16
	mm	1253	1302	506	710
50	Inch	56	51 4/16	19 15/16	27 15/16
	mm	1406	1302	506	710
60	Inch	65 13/16	51 4/16	19 _{15/16}	27 15/16
	mm	1672	1302	506	710
70	Inch	75 11/16	51 4/16	19 15/16	27 15/16
	mm	1922	1302	506	710
80	Inch	88 7/16	51 4/16	19 _{15/16}	27 15/16
	mm	2246	1302	506	710
100	Inch	105 3/16	51 4/16	19 _{15/16}	27 15/16
	mm	2672	1302	506	710

