


Framing Information: 98HH Corner (RS/LS) (Double Glass)



Framing Dimensions

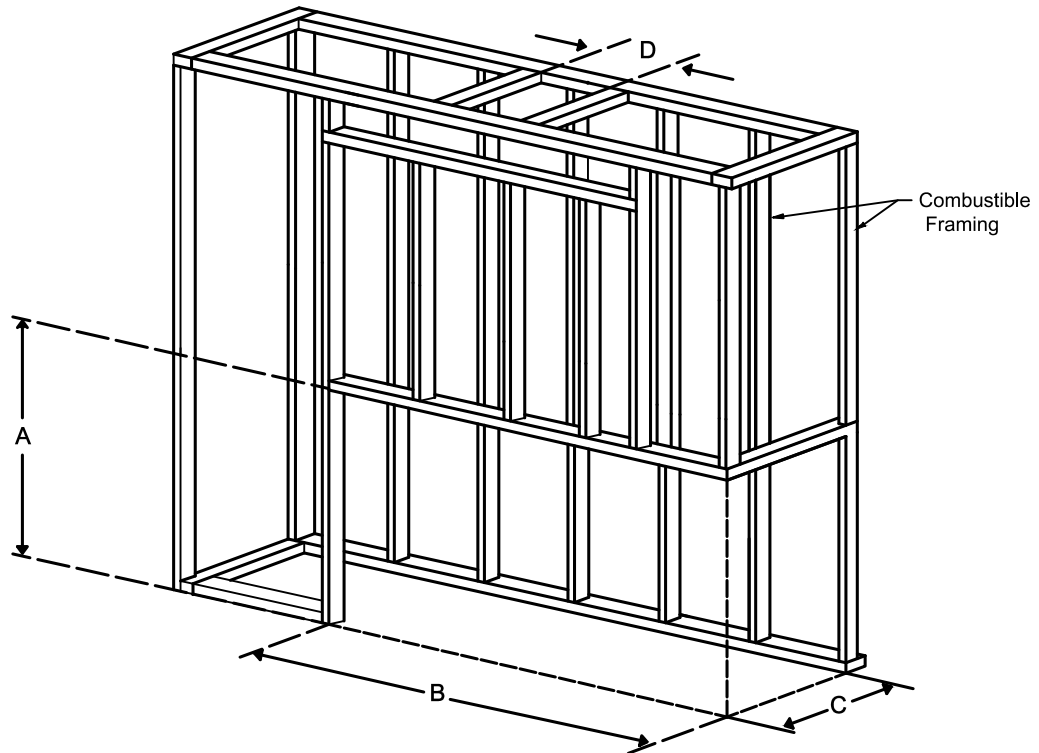

Model	A	B	C	D
98HH RS/LS	49 1/2"	104 1/2"	21 5/8"	Refer to Vent Manufacturer's Firestop Dimensions


Note: 1. Drawings are not to Scale  
 2. All dimensions in inches  
 3. No weight can be transferred to the fireplace. ALL FRAMING MUST BE SELF-SUPPORTED.

# Framing Information: 98HH Corner (RS/LS) (Double Glass)



## Framing Details

Nailing flanges fold up and connect to the framing.  
 ALL FRAMING MUST BE SELF-SUPPORTED.  
 The fireplace must not bear any weight.

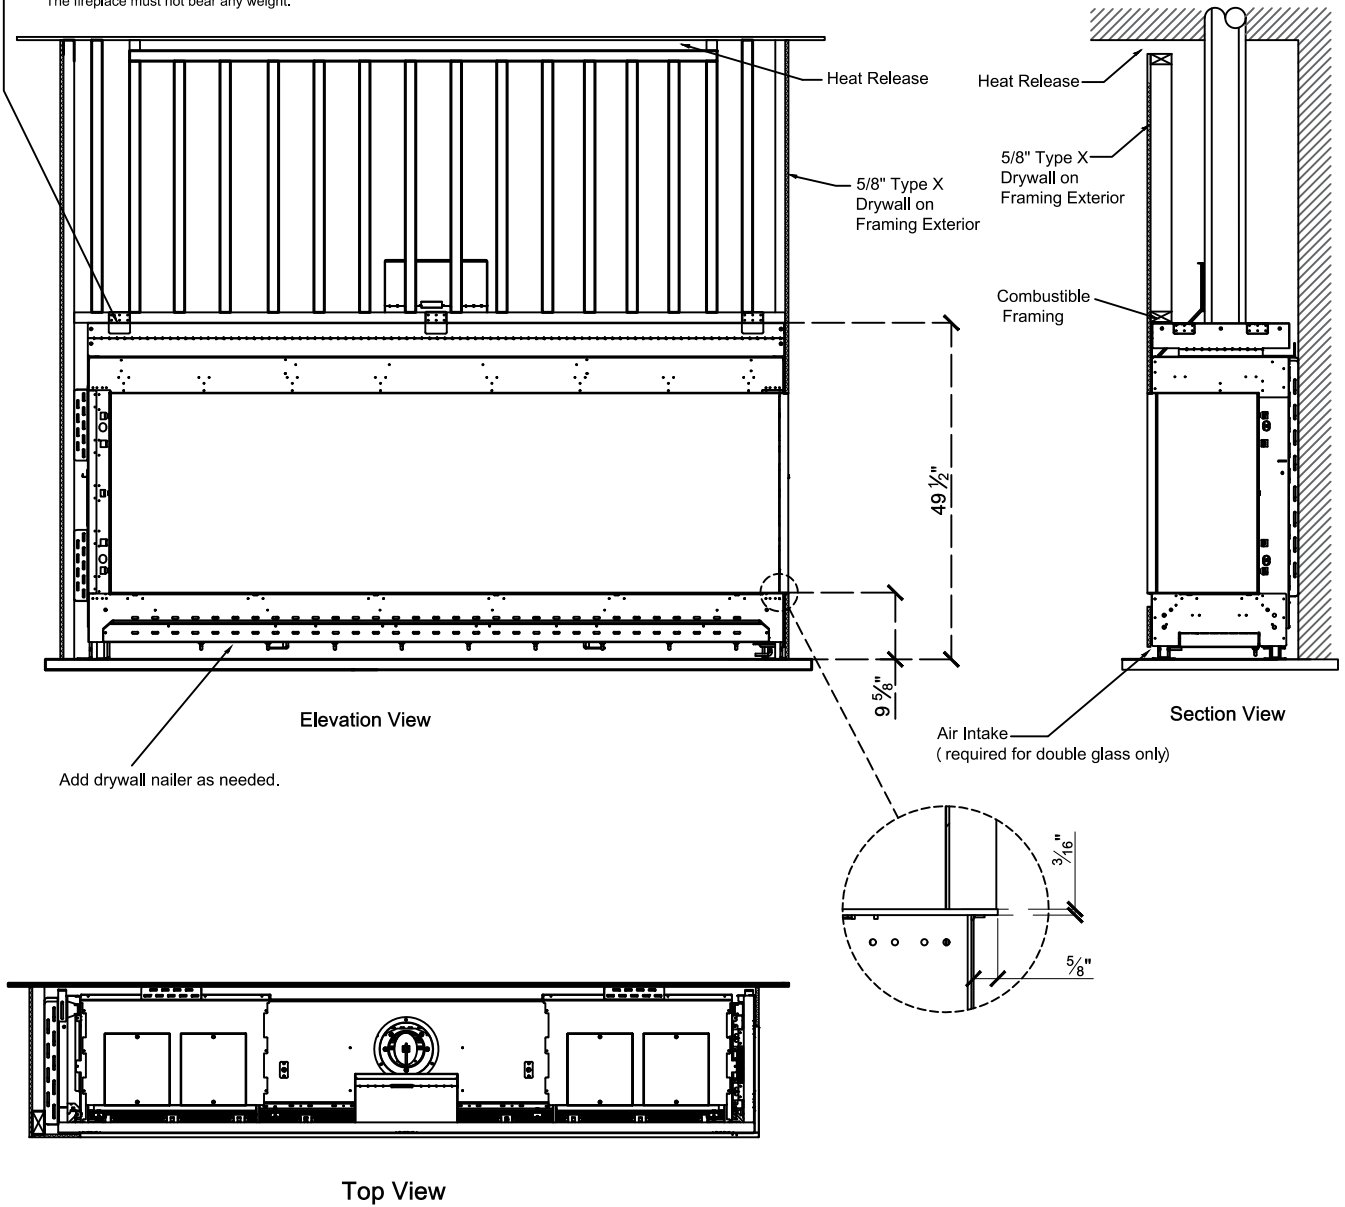


The valve can be moved 36" from the center of the fireplace in any direction.

- Note:
1. Drawings are not to Scale
  2. All dimensions in inches
  3. No weight can be transferred to the fireplace. ALL FRAMING MUST BE SELF-SUPPORTED.

## Framing Information: 98HH Corner (RS/LS) (Double Glass)



### Fireplace Dimensions

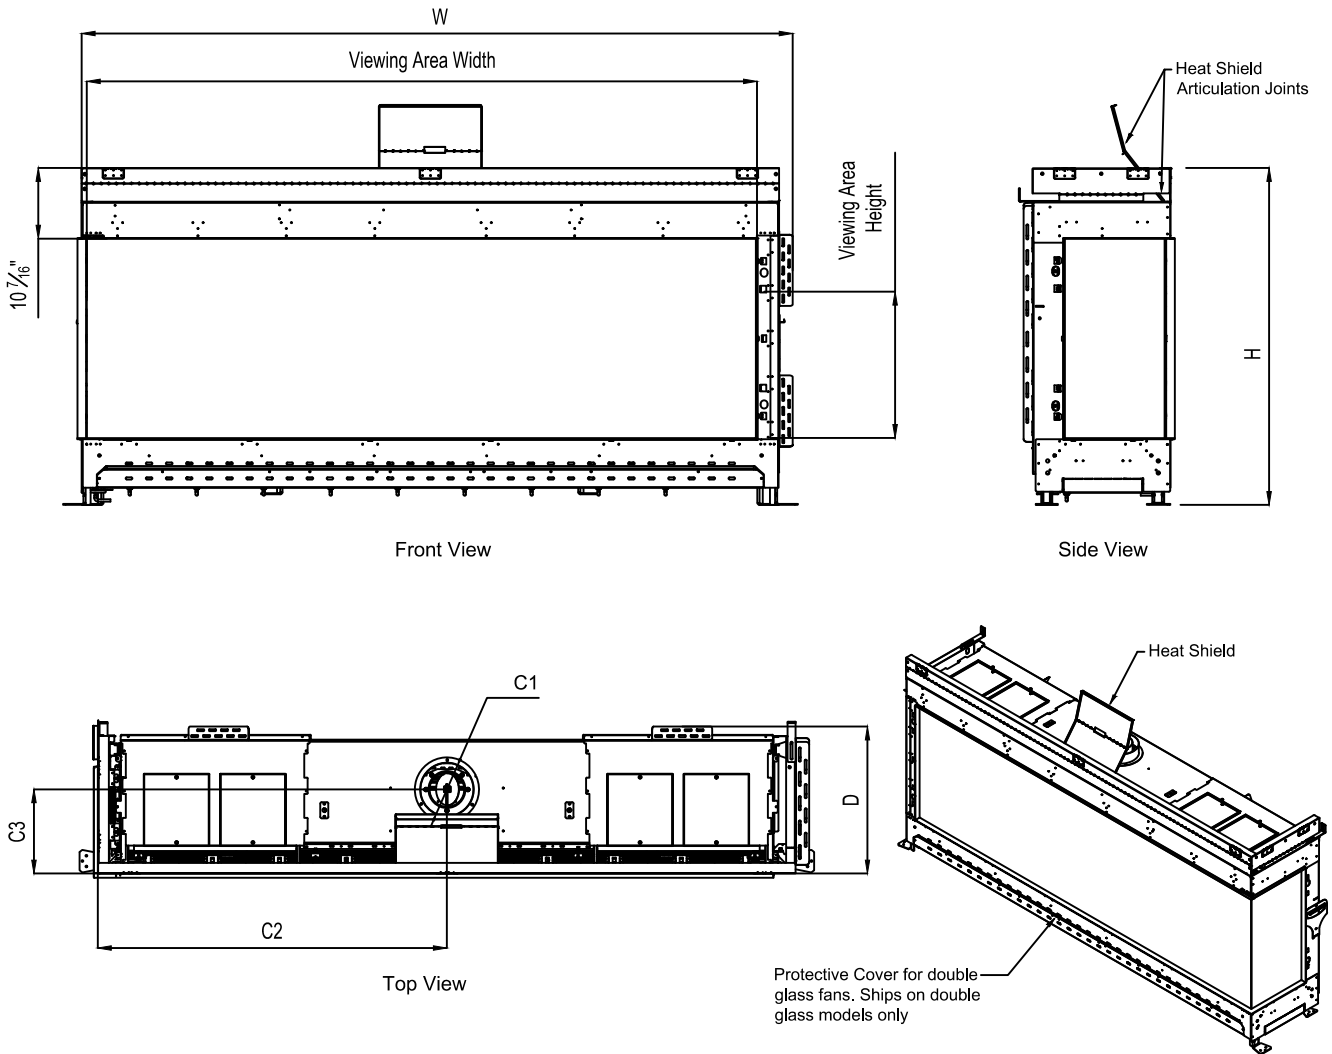

Model	(H) Height	(W) Width	(D) Depth	C1	C2	C3	Viewing Area	
							Front	Side
98HH RS/LS	49 1/2"	104 1/2"	21 5/8"	7 7/8"	51 1/4"	12 5/16"	98 5/16" W X 29 1/2" H	14 13/16" W X 29 1/2" H

Note: 1. Drawings are not to Scale  
2. All dimensions in inches