

Service Manual

Models

North America

ASP30-AM QST30-AM

ASP36-AM QST36-AM

ASP42-AM QST42-AM

ASP48-AM QST48-AM

Europe

ASP30-EU

ASP36-EU


ASP42-EU

Australia

ASP30-AU

ASP36-AU

ASP42-AU

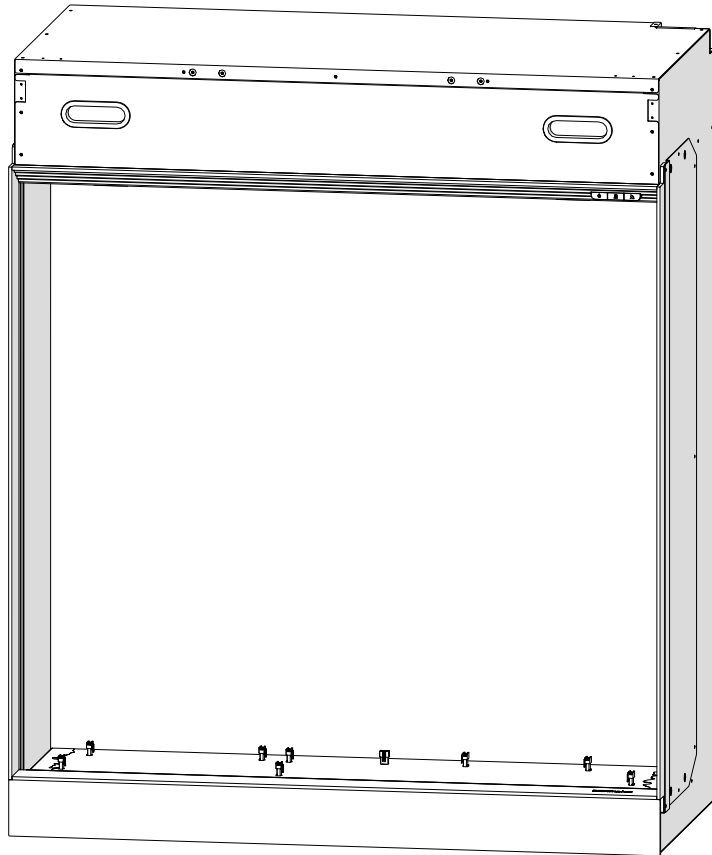

IMPORTANT SAFETY INFORMATION:

Read this manual first before attempting to install or use this electric fireplace. Always comply with the warnings and safety instructions contained in this manual to prevent personal injury or property damage.

Conventions used in this manual:

! **NOTE:** Procedures and techniques that are considered important enough to emphasize.


⚠ **CAUTION:** Procedures and techniques which, if not carefully followed, will result in damage to the equipment.

⚠ **WARNING:** Procedures and techniques which, if not carefully followed, will expose the user to the risk of fire, serious injury, or death.

Table of Contents


Exploded Parts Diagram	3
LED Configurations	4
North America	5
Replacement Parts List	5
Wiring Diagrams - North America	6
Europe	9
Replacement Parts List	9
Parts serviced in upper housing	10
Preparing the firebox for service in upper housing	10
Heater Assembly Replacement	11
On-board controls replacement	12
Speaker replacement	13
Parts serviced under the ember bed	14
Preparing the firebox for service under the media bed	14
Ember bed LED replacement	15
Power switch replacement	16
Overheard LED Replacement	17
Expansion board replacement	18
Parts serviced behind the mirrored glass	19
Preparing for behind the mirrored glass	19
Temperature Sensor Replacement	20
Main control board replacement	21
Power board replacement	21
Board replacement	21
Power supply replacement	21
Flicker rod replacement	22
Flame LED replacement	23
Flicker motor replacement	24
Troubleshooting	25

Exploded Parts Diagram

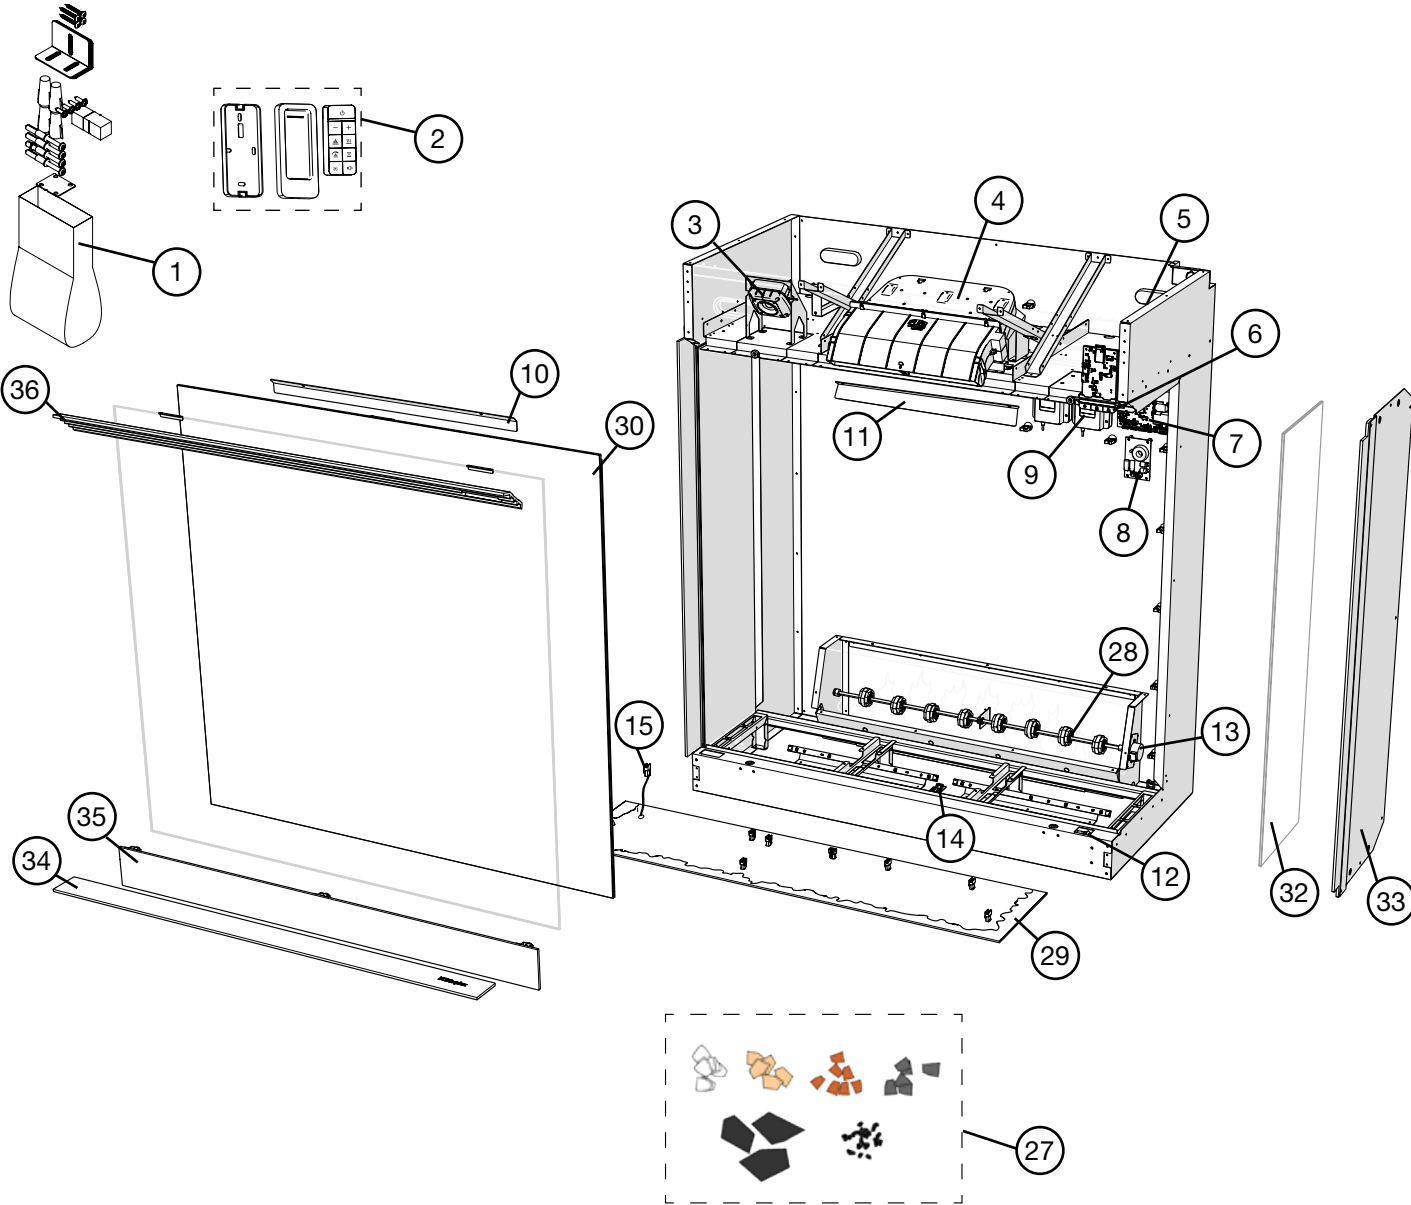


LED Configurations

ASP30
QST30

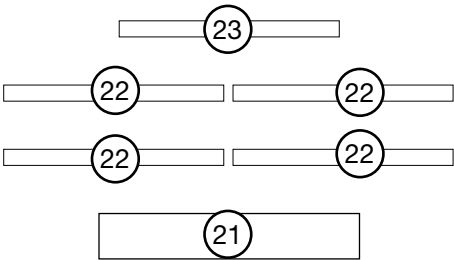


Overhead
Ember bed (Back)
Ember bed (Front)
Flame

ASP36
QST36

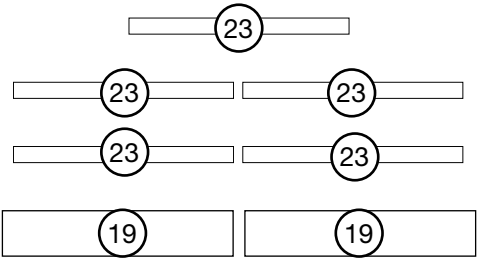


Overhead
Ember bed (Back)
Ember bed (Front)
Flame

ASP42
QST42

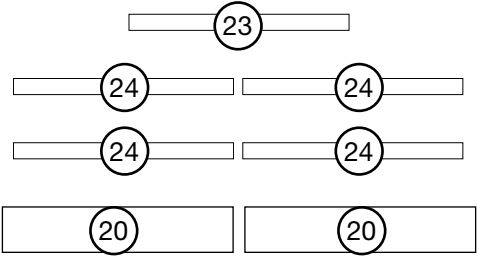

Overhead
Ember bed (Back)
Ember bed (Front)
Flame

ASP48
QST48

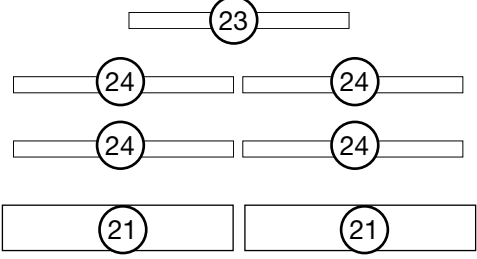


Overhead
Ember bed (Back)
Ember bed (Front)
Flame

Replacement Parts List


1. Hardware kit	500003776	29. Ember bed	
2. Remote control	500003384	ASP30-AM/ QST30-AM	500003387
3. Speaker	500003391	ASP36-AM/ QST36-AM	500003388
4. Heater Assembly	500003383	ASP42-AM/ QST42-AM	500003389
5. Temperature sensor	X-3001560600RP	ASP48-AM/ QST48-AM	500003390
6. On-board controls		30. Reflective glass	
ASP30-AM	500003386	ASP30-AM	500003375
ASP36-AM	500004532	ASP36-AM	500003376
ASP42-AM	500004533	ASP42-AM	500003377
ASP48-AM	500004534	ASP48-AM	500003378
QST30-AM	500005441	QST30-AM	500005354
QST36-AM	500005442	QST36-AM	500005355
QST42-AM	500005443	QST42-AM	500005356
QST48-AM	500005444	QST48-AM	500005357
7. Main control board	500003385	31. Front glass	
8. Power board	500003869	ASP30-AM	500003226
9. Power supply 5 A	X-2100250500RP	ASP36-AM	500003227
10. Mirrored glass bracket	500003778	ASP42-AM	500003184
11. Light shield	500005358	ASP48-AM	500003228
12. Power switch	X-2800071200RP	QST30-AM	500005339
13. Flicker motor	X-2000550100RP	QST36-AM	500005350
14. Log expansion board	500003782	QST42-AM	500005351
15. N/A		QST48-AM	500005352
16. N/A		32. Side glass	
17. Power cord	500003779	ASP30-AM	500003328
18. Heater jumper	X-4300520100RP	ASP36-AM	500003372
19. 4-segment flame LED	500003392	ASP42-AM	500003373
20. 5-segment flame LED	500003393	ASP48-AM	500003374
21. 6-segment flame LED	500003394	All QST models	500005353
22. 4-segment RGB LED	X-3002350100RP	33. Side panel	
23. 5-segment RGB LED	X-3002350400RP	ASP30-AM	500003769
24. 6-segment RGB LED	X-3002350200RP	ASP36-AM	500003770
25. 8-segment RGB LED	X-3002350300RP	ASP42-AM	500003771
26. Complete log set	500003774	ASP48-AM	500003772
27. Tumbled glass	500003395	All QST models	500005338
28. Flicker rod - Dynamic Fire		34. Sill trim	
ASP30-AM/ QST30-AM	500005441	ASP30-AM/ QST30-AM	500003734
ASP36-AM/ QST36-AM	500005442	ASP36-AM/ QST36-AM	500003736
ASP42-AM/ QST42-AM	500005443	ASP42-AM/ QST42-AM	500003737
ASP48-AM/ QST48-AM	500005444	ASP48-AM/ QST48-AM	500003738
Flicker rod - Multi-Fire		35. Kick plate	
ASP30-AM/ QST30-AM	500005290	ASP30-AM/ QST30-AM	500003765
ASP36-AM/ QST36-AM	500005291	ASP36-AM/ QST36-AM	500003766
ASP42-AM/ QST42-AM	500005292	ASP42-AM/ QST42-AM	500003767
ASP48-AM/ QST48-AM	500005293	ASP48-AM/ QST48-AM	500003768
		36. Front grill	
		ASP30-AM/ QST30-AM	500003754
		ASP36-AM/ QST36-AM	500003756
		ASP42-AM/ QST42-AM	500003757
		ASP48-AM/ QST48-AM	500003758

Wiring Diagrams - North America


ASP30-AM / QST30-AM

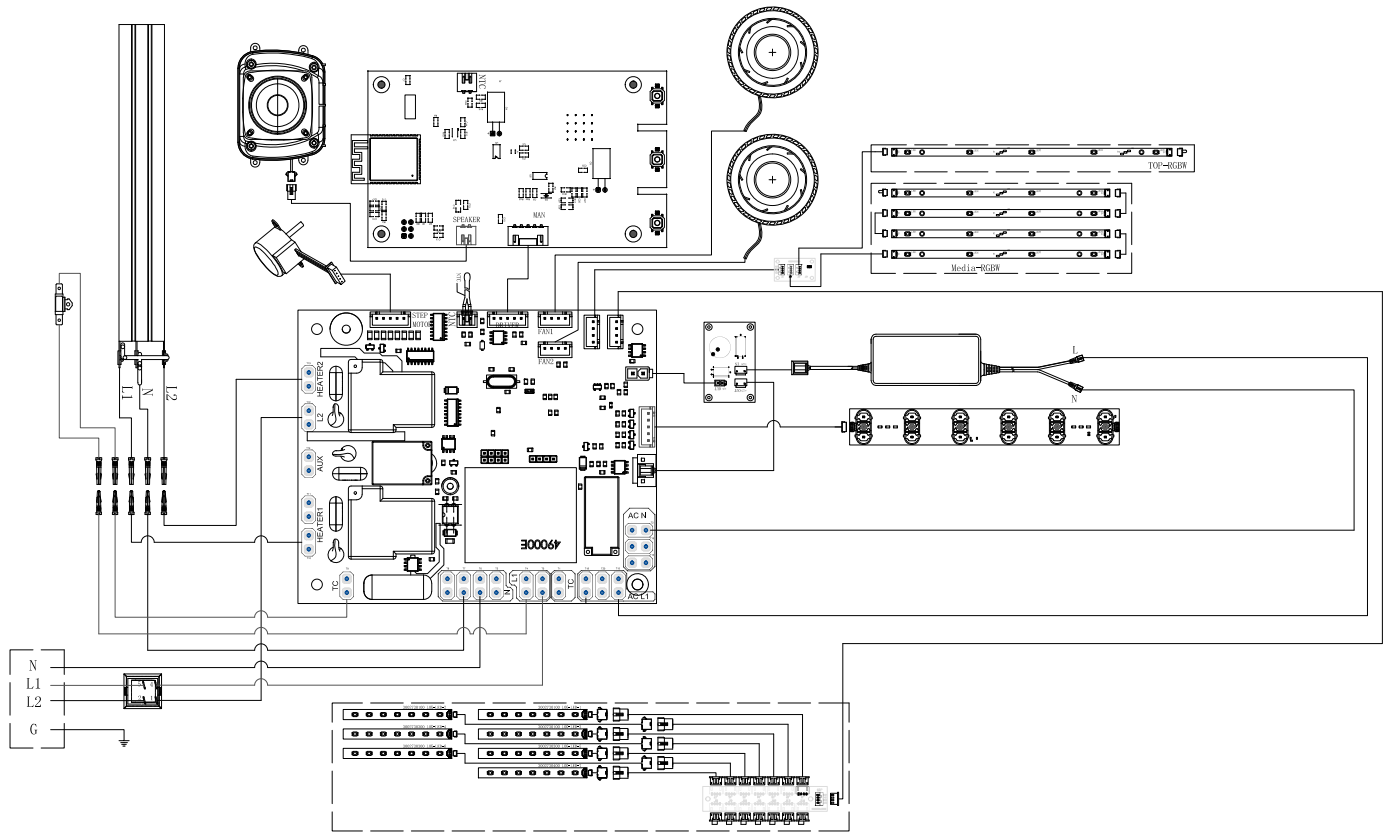


ASP36-AM / QST36-AM

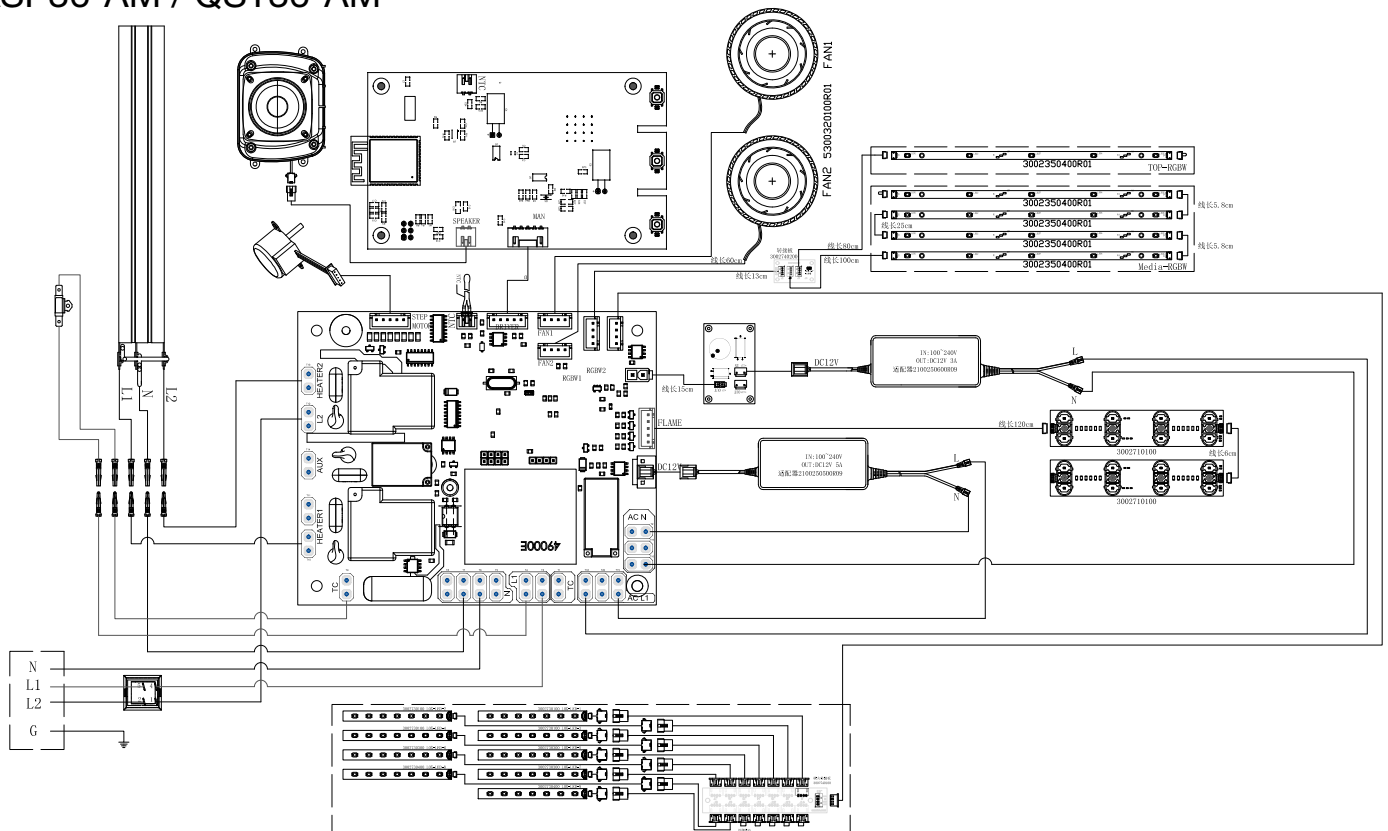

ASP42-AM / QST42-AM

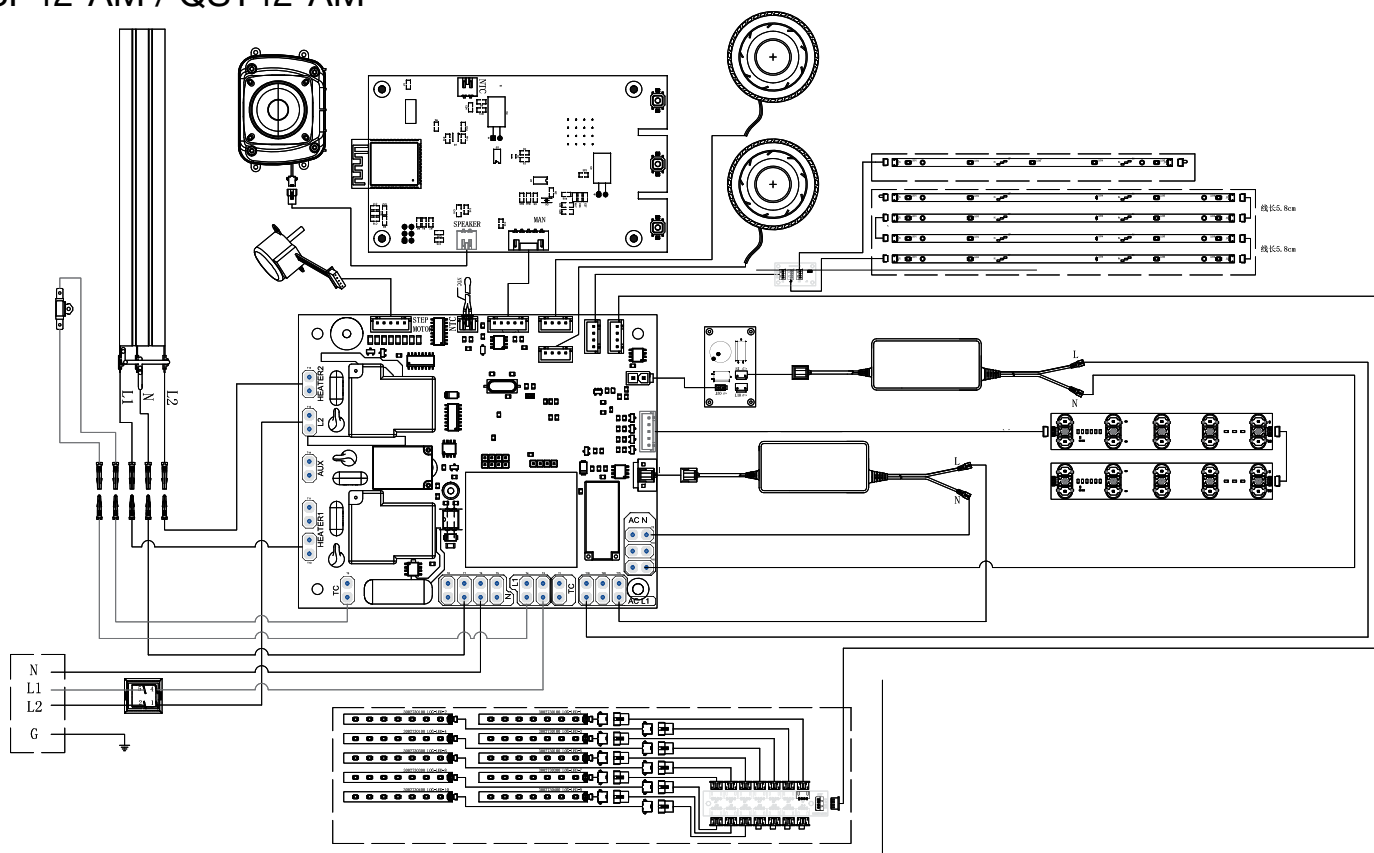

ASP48-AM / QST48-AM



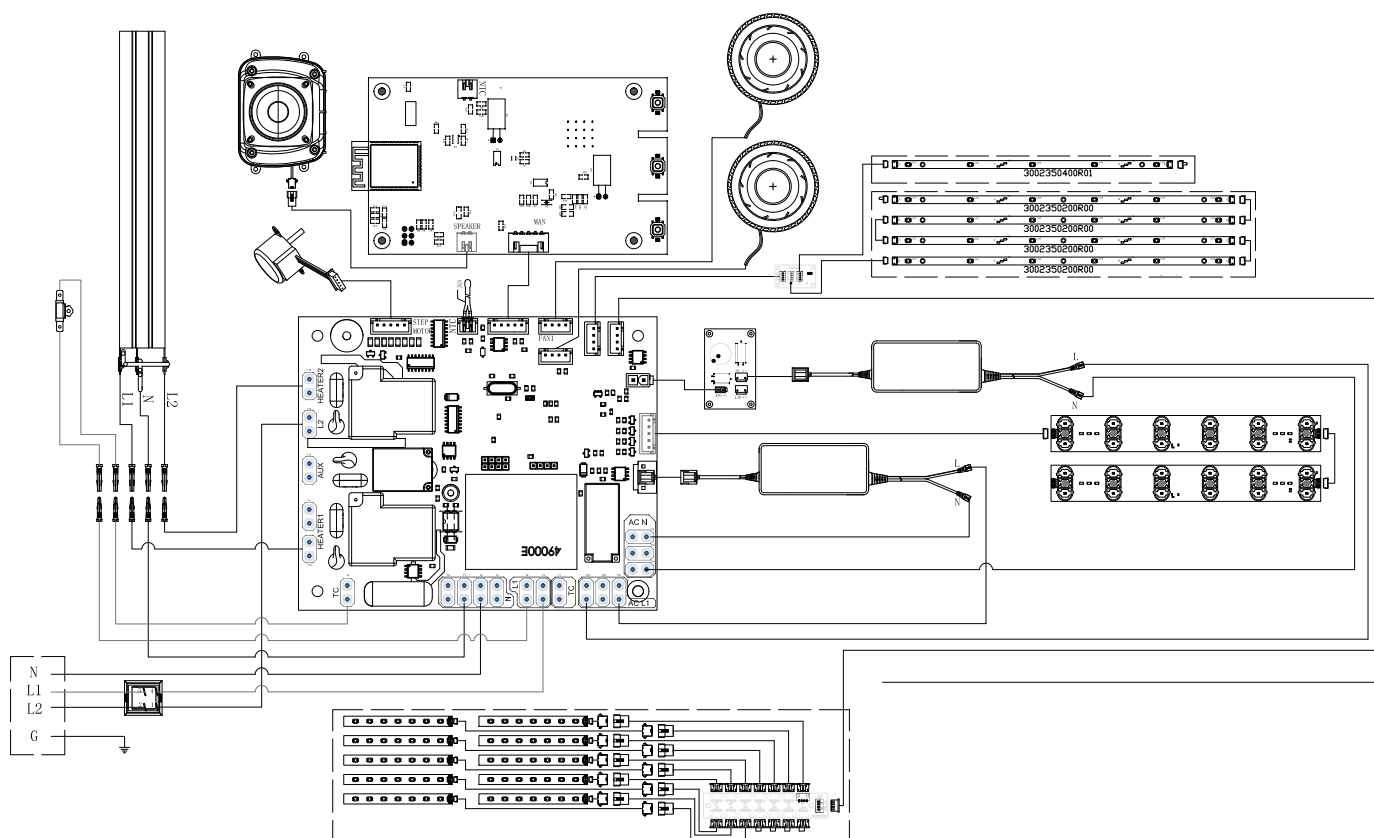


Replacement Parts List - ASP30-EU

1. Hardware kit	500005328	21. 6-segment flame LED	500005198
2. Remote control	500005217	22. 4-segment RGB LED	500004577
3. Speaker	500005218	23. 5-segment RGB LED	500004578
4. Heater Assembly	500005219	24. N/A	
5. Temperature sensor	500004563	25. N/A	
6. On-board controls	500005253	26. Complete log set	500005327
7. Main control board	500005220	27. Tumbled glass	500005264
8. Power board	500005222	28. Flicker rod	500005325
9. Power supply 5 A	500004402	29. Ember bed	500005326
10. Mirrored glass bracket		30. Reflective glass	500005320
11. Light shield		31. Front glass	500005319
12. Power switch	X-2800071200RP	32. Side glass	500005322
13. Flicker motor	500004387	33. Side panel	500005323
14. Log expansion board	500005251	34. Sill trim	500005321
15. Log wire harness	500005195	35. Kick plate	500003765
16. Adapter Board	500005221	36. Front grill	500005324
17. Power cord		37. Side bracket set (4)	500005193
From product	500000473	38. Trim kit	500004074
UK	500001328	39. Suction cup	500000454
EU	X-03/22881/0		
18. Heater jumper	500005267		
19. N/A			
20. N/A			

Parts serviced in upper housing

Preparing the firebox for service in upper housing

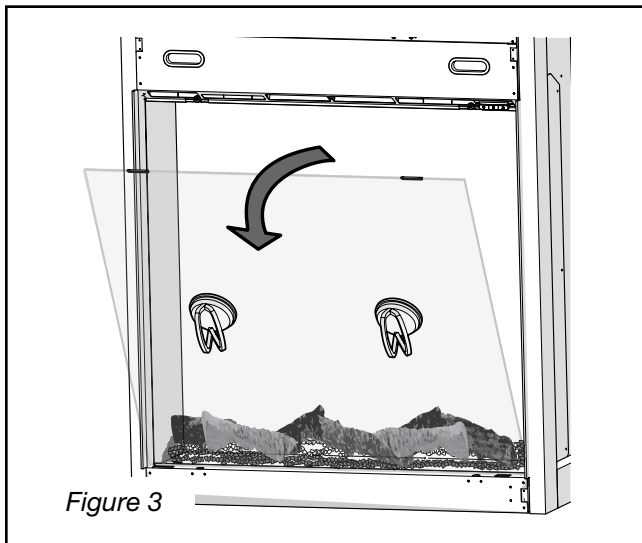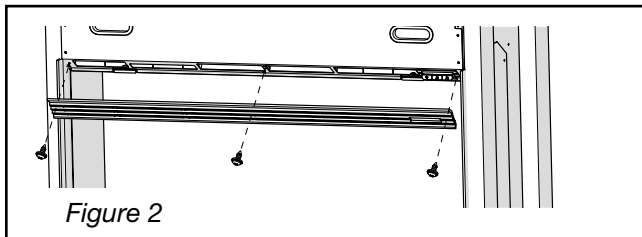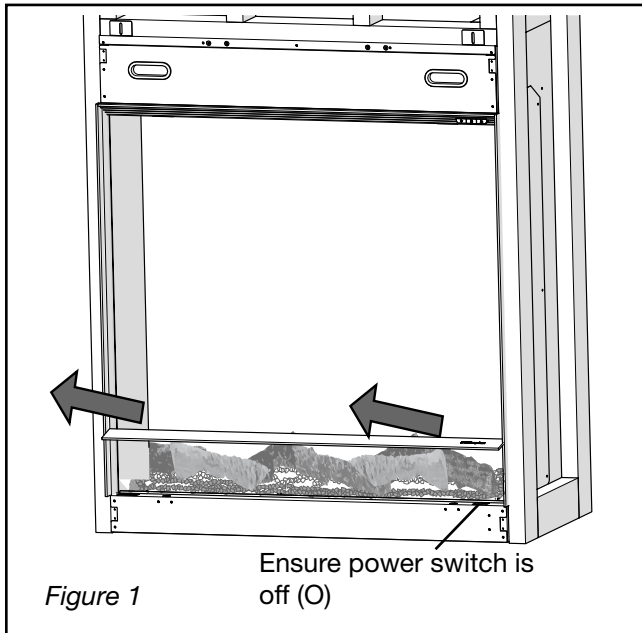

Heater assembly, on-board controls, overhead LEDs, and speaker are located in the top of the fireplace. The front glass needs to be removed to access these components.

Tools required:

Suction cups (provided with fireplace)
Philips head screwdriver

⚠ WARNING: If the firebox was operating prior to servicing, allow at least 10 minutes for the heating elements to cool off to avoid accidental burning of skin.

⚠ WARNING: Disconnect power before attempting any maintenance to reduce the risk of electric shock or injury to persons.

1. Turn off the power to the fireplace before starting the service.
2. Remove magnetic sill trim. (**Figure 1**)
3. Remove the 3 screws that secure the top grill. (**Figure 2**)
4. Attach the suction cups to the front glass and use them to lift the glass up and tilt it to remove it. (**Figure 3**)
Note: Set the front glass in a safe place for the duration of the service.

Heater assembly replacement

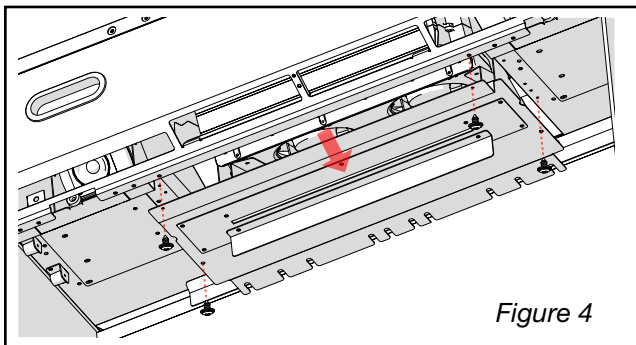


Figure 4

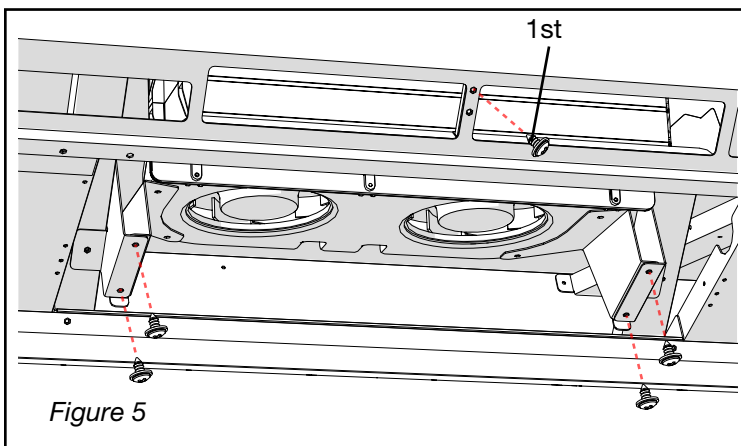


Figure 5


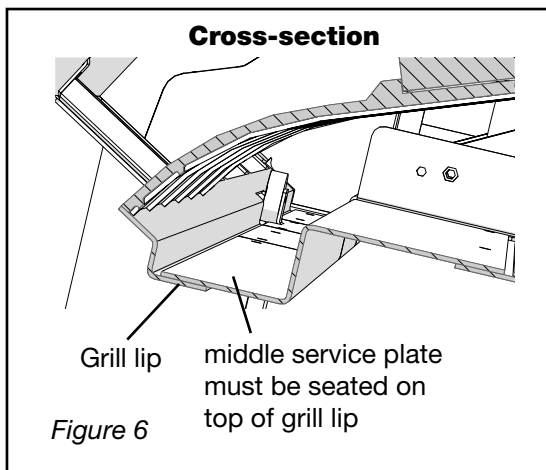


Figure 6

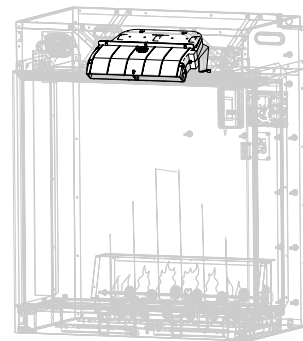

Tools required:

Suction cup (provided with fireplace)
Philips head screwdriver

1. Turn off the power to the fireplace from the electrical panel and follow steps for removing front glass.
2. Remove the 4 screws on the heater assembly panel. Slide the plate back to release it. (Figure 4)
3. Disconnect the LEDs to remove the plate and set it aside.
4. Remove the 5 screws holding the defective heater, starting with the one on the front grill. (Figure 5)
5. Transfer the connections to the new heater assembly.
6. Secure the new heater assembly, starting with the one at the front on the grill.
7. Reinstall the middle panel assembly, starting from the back, ensuring that:
 - a) the LED strip is reconnected at both ends
 - b) the front of the service panel is tucked inside, sitting on top of the grill lip. (Figure 6)
8. Reassemble the fireplace.

On-board controls replacement

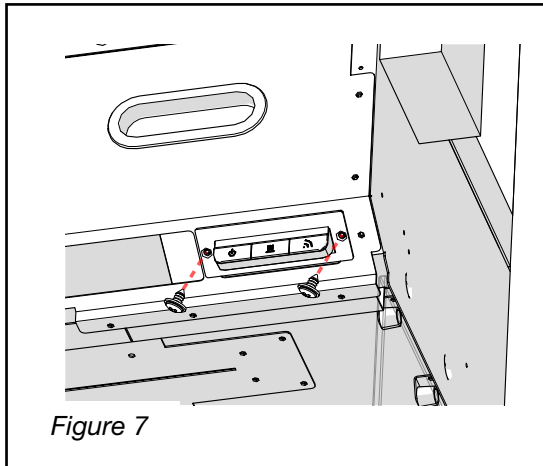
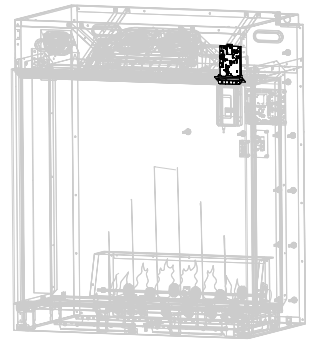


Figure 7

Tools required:

Suction cup (provided with fireplace)
Philips head screwdriver

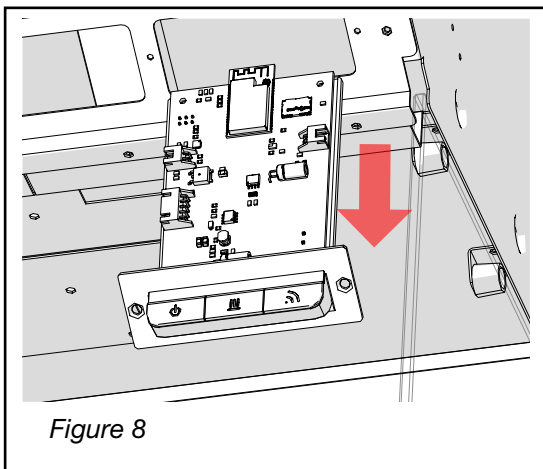


Figure 8

1. Turn off the power to the fireplace from the electrical panel and follow steps for removing the front glass.
2. Remove the 2 screws on each side of the on-board control assembly. (Figure 7)
3. Pull out the defective on-board control assembly. (Figure 8)
4. Transfer the connections from the old board to the new board.
5. Secure the new board.
6. Reassemble the fireplace.
7. Two QR code stickers are included with the replacement part; place one on the back of the owner's manual and the other beneath the sill trim to cover the existing QR codes.
8. Re-synchronize the remote to the new board.
9. If using the app, the fireplace will have to be added again.

Speaker replacement

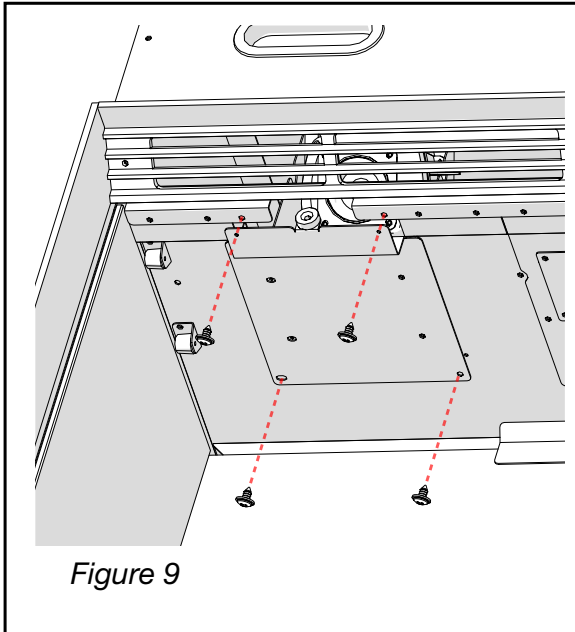
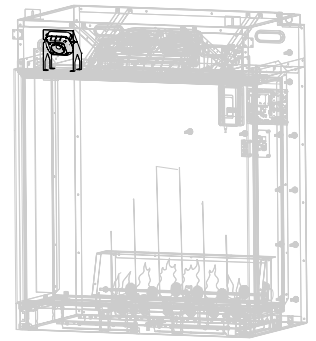


Figure 9

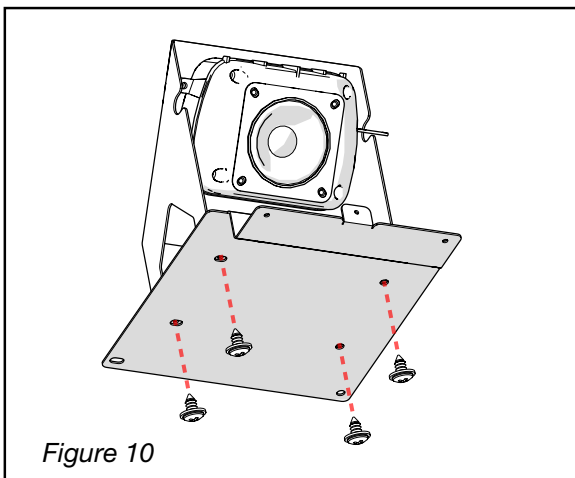


Figure 10

Tools required:

Suction cup (provided with fireplace)
Philips head screwdriver

1. Turn off the power to the fireplace from the electrical panel and follow steps for removing front glass.
2. Remove the 4 screws on the speaker panel. Slide the bracket back to release it. (Figure 9)
3. Remove the four screws that hold the speaker. (Figure 10)
4. Transfer the connector to the new speaker.
5. Secure the new speaker.
6. Secure the bracket, ensuring the front part is tucked inside.
7. Reassemble the fireplace.

Overheard LED Replacement

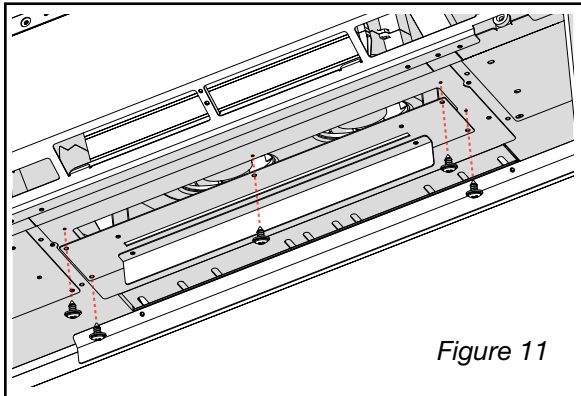
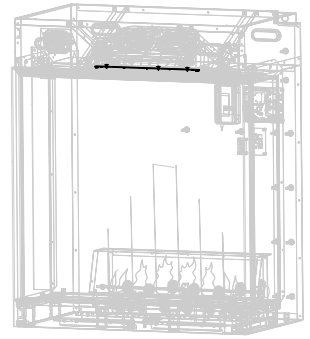


Figure 11

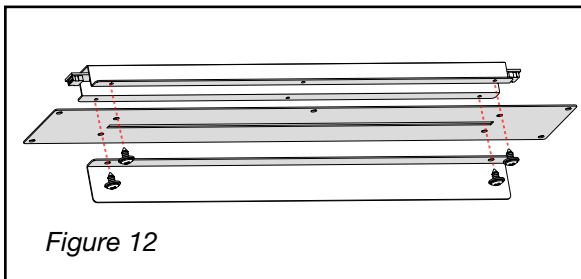


Figure 12

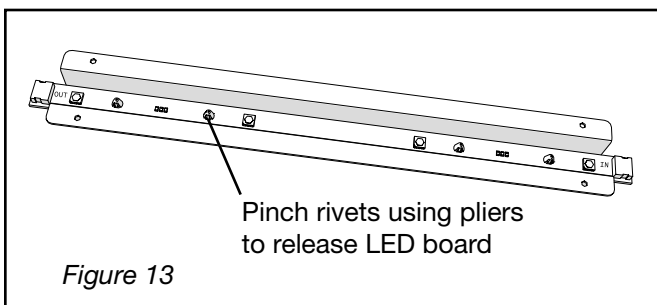


Figure 13

Tools required:

Suction cup (provided with fireplace)
Philips head screwdriver
Pliers

1. Turn off the power to the fireplace from the electrical panel and follow steps for removing front glass.
2. Remove the 4 screws on the panel. Disconnect the LED connector. (Figure 11)
3. Disconnect the LED connectors.
4. Remove the four screws (two on each end). (Figure 13)
5. Pinch the standoffs while carefully pulling away the board to release it. (Figure 14)
6. Properly orient the board, ensuring that the IN is toward the right.
7. Transfer the connectors from the other side to the new board (the left side has a return wire connector)
8. Reassemble the fireplace.

Parts serviced under the ember bed

Ember bed LED strips, power switch, and log expansion board are located under the ember bed.

Tools required:

Suction cups (provided with fireplace)
Philips head screwdriver

- ⚠ WARNING:** If the firebox was operating prior to servicing, allow at least 10 minutes for the heating elements to cool off to avoid accidental burning of skin.
- ⚠ WARNING:** Disconnect power before attempting any maintenance to reduce the risk of electric shock or injury to persons.

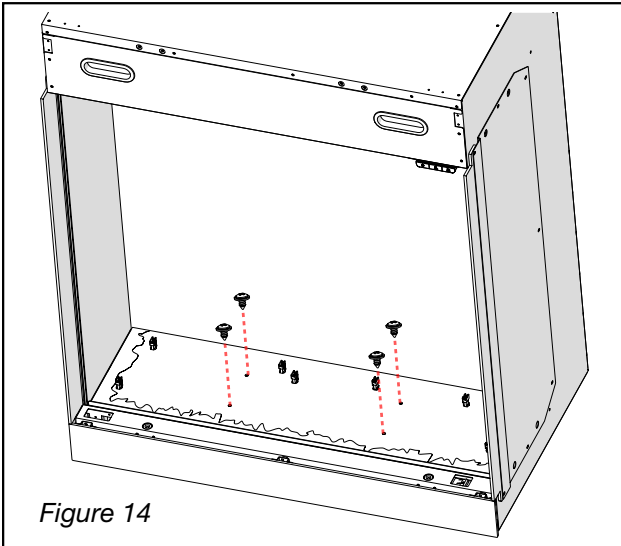




Figure 14

1. Turn off the power to the fireplace before starting the service.
2. Remove magnetic sill trim. (Figure 1)
3. Remove the 3 screws that secure the top grill. (Figure 2)
4. Attach the suction cups to the front glass and use them to lift the glass up and tilt it to remove it. (Figure 3)
Note: Set the front glass in a safe place for the duration of the service.
5. Disconnect each log and set them aside.
6. Remove the tumbled glass media and set aside.
7. Remove the screws that secure the media bed. (Figure 14)
8. Unplug the log wires from the log expansion board
9. Carefully remove the media bed (avoid bending the media bed), ensuring the wires don't get stuck.

When reassembling the fireplace

The logs are powered in series. When reconnecting the logs, the specific order is not important, but if not every connection is used, the connectors on the board need to be filled sequentially since they are powered in series (i.e. 1,2,3,4 – not 1,2,3,5)

Ember bed LED replacement

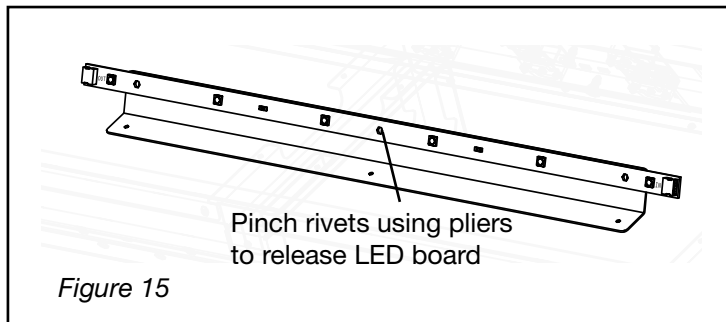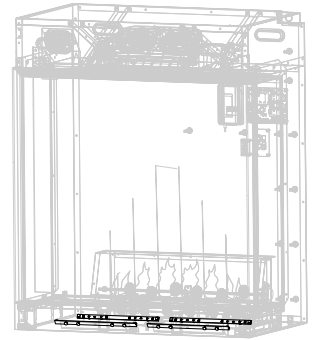

Tools required:

Suction cup (provided with fireplace)
Philips head screwdriver

1. Turn off the power to the fireplace from the electrical panel and follow steps for servicing components under the ember bed.
2. Disconnect connectors of the defective board
3. Pinch standoffs while carefully pulling the LED strip away to remove it (make note of which side of the LED says IN and OUT). (Figure 15)
4. Properly orient the new LED strip, ensuring that the IN and OUT are oriented correctly and secure it on the standoffs
5. Connect the LED strip.
6. Reassemble the fireplace.

Power switch replacement

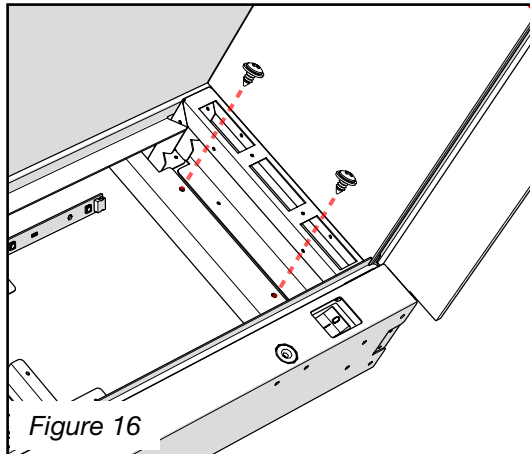
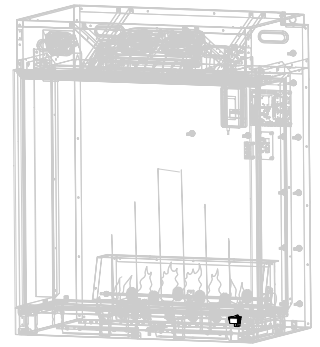


Figure 16

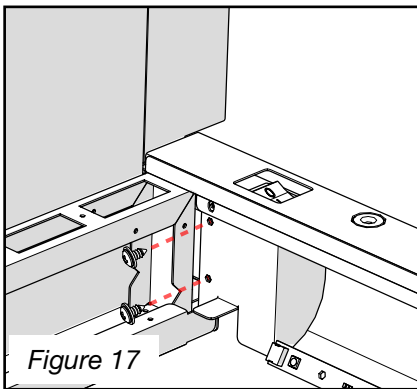


Figure 17

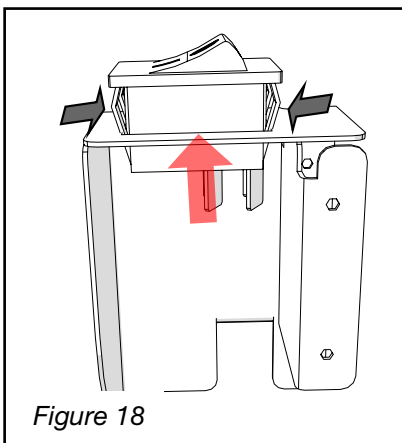




Figure 18

Tools required:

Suction cup (provided with fireplace)
Philips head screwdriver
Pliers

1. Turn off the power to the fireplace from the electrical panel and follow steps for servicing components under the ember bed.
2. Remove the 2 screws on the "raceway" bracket. (Figure 16)
3. Remove the 2 screws on the power switch bracket. (Figure 17)
4. Release the power switch from the bracket. (Figure 18)
5. Transfer the connections to the new power switch.
6. Secure the new power switch the bracket.
7. Secure the power switch bracket.
8. Secure the raceway bracket.
9. Reassemble the fireplace.


Expansion board replacement

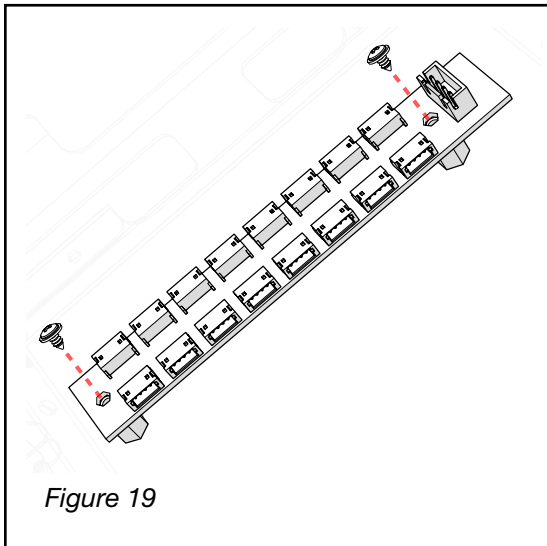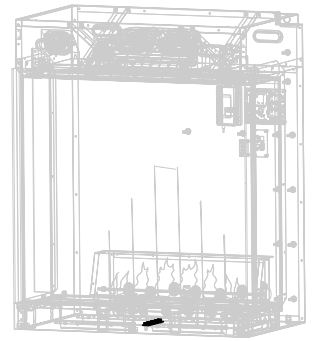

1. Turn off the power to the fireplace from the electrical panel and follow steps for servicing components under the ember bed.
2. Disconnect the 4-pin connector
3. Remove the two screws
4. Secure the new log expansion board
5. Connect the 4-pin wires.
6. When reconnecting the logs, ensure they are connected sequentially, beginning with J1.
7. Reassemble the fireplace.

Parts serviced behind the mirrored glass




Preparing for behind the mirrored glass

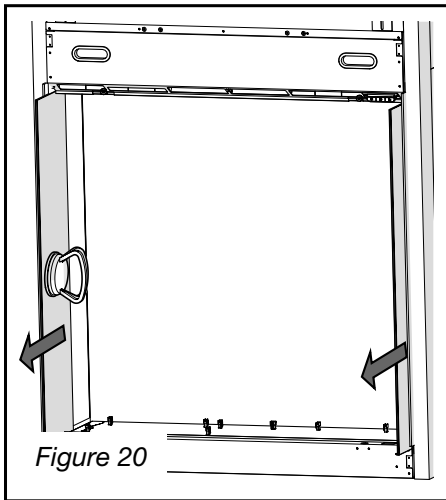

Heater assembly, on-board controls, overhead LEDs, and speaker are located in the top of the fireplace. The front glass needs to be removed to access these components.



Tools required:

Suction cups (provided with fireplace)
Philips head screwdriver

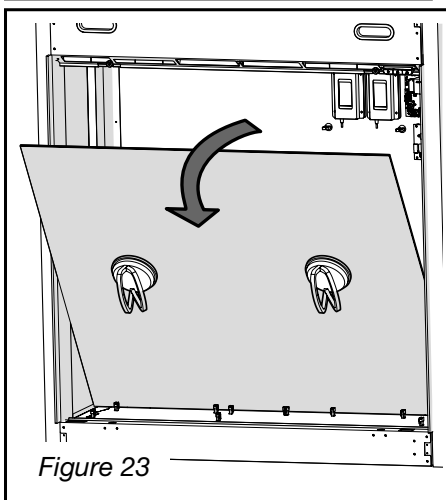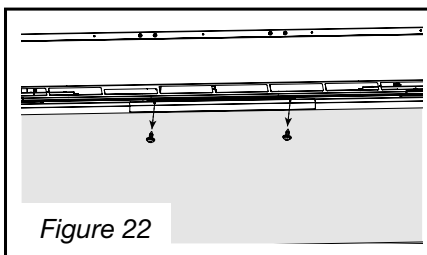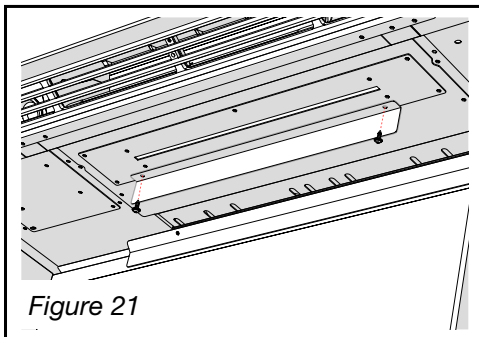

- ⚠ WARNING:** If the firebox was operating prior to servicing, allow at least 10 minutes for the heating elements to cool off to avoid accidental burning of skin.
 - ⚠ WARNING:** Disconnect power before attempting any maintenance to reduce the risk of electric shock or injury to persons.
1. Turn off the power to the fireplace before starting the service.
 2. Remove magnetic sill trim. (Figure 1)
 3. Remove the 3 screws that secure the top grill. (Figure 2)
 4. Attach the suction cups to the front glass and use them to lift the glass up and tilt it to remove it. (Figure 3) Set it in a safe place for the duration of the service.
 5. Using the suction cup, remove the side glass. (Figure 20)
 6. Remove the 2 screws on the back glass bracket. (Figure 22)
 7. Attach the suction cups to the back glass. Lift up and tilt to remove. (Figure 23) Set it in a safe location for the duration of the service.

Temperature Sensor Replacement

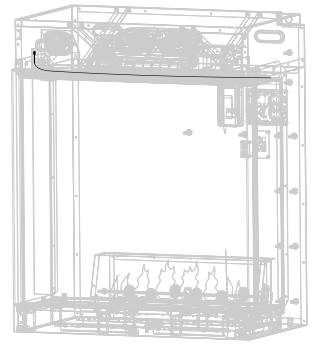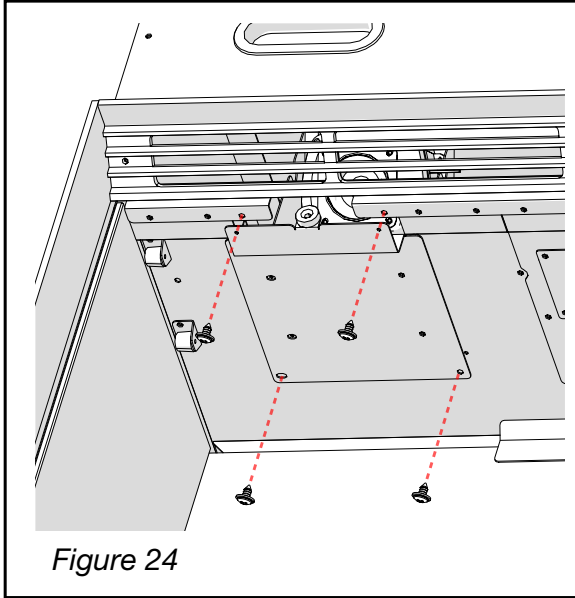

Tools required:

Suction cup (provided with fireplace)
Philips head screwdriver
Side cutters

1. Turn off the power to the fireplace from the electrical panel and follow steps for service behind the mirrored glass.
2. Remove the 4 screws on the speaker panel. (Figure 24)
3. Slide the service panel back to release, and carefully lower it. Disconnect the speaker connector and set the speaker panel aside.
4. Remove the 2 screws on the temperature sensor bracket.
5. Cut the wire tie to remove the defective temperature sensor from its bracket.
6. Trace the temperature sensor wire to the main control board.
7. Disconnect the temperature sensor and remove it, cutting any restrictive wire ties.
8. Feed the connector from the new temperature sensor toward the main control board, and connect it into the correct location.
9. Secure the new temperature sensor on the temperature sensor bracket using the provided wire tie.
10. Secure the bracket using the two (2) screws previously removed.
11. Secure the left service panel and reassemble the fireplace.
12. Reassemble the fireplace.



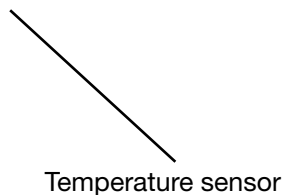


Figure 25

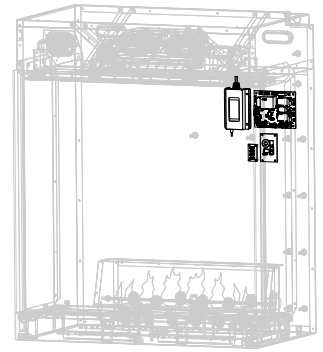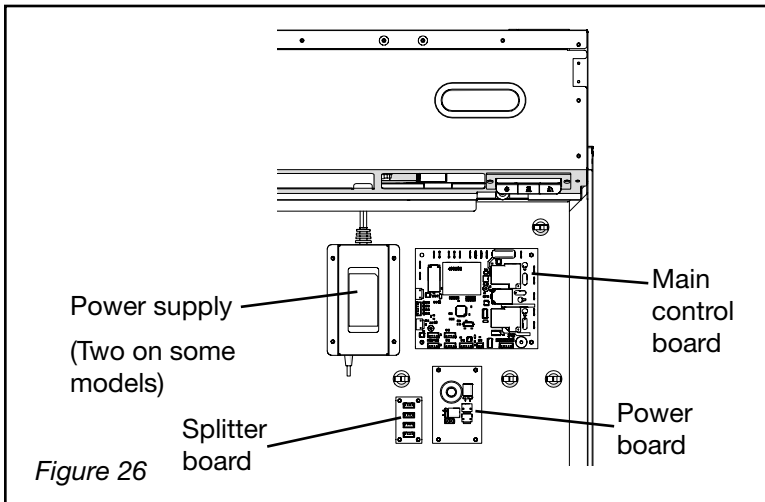

Tools required:

Suction cup (provided with fireplace)
 Philips head screwdriver
 Side cutters

Main control board replacement

Power board replacement




Splitter board replacement

1. Turn off the power to the fireplace from the electrical panel and follow steps for service behind the mirrored glass.
2. It is recommended to take a picture of the board and wires for reference
3. Transfer connections from the defective board to the new board. Cut any wire ties as needed to release bundles of wire to have more working room.
4. Remove screws that secure the defective board.
5. Secure the new board.
6. Use provided wire ties to bundle wires, ensuring that they are held away from where the mirrored glass, otherwise bundles of wires may be visible during operation.
7. Reassemble the fireplace.

Power supply replacement

1. Turn off the power to the fireplace from the electrical panel and follow steps for service behind the mirrored glass.
2. Remove the bracket that holds the defective power supply
3. Transfer the connections to the new power supply
4. Secure the new power supply with the bracket.
5. Reassemble the fireplace.

Flicker rod replacement

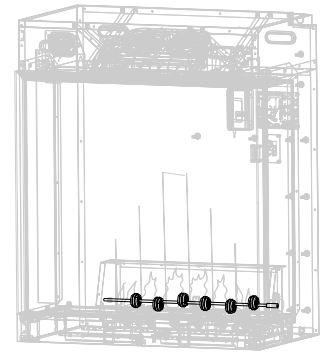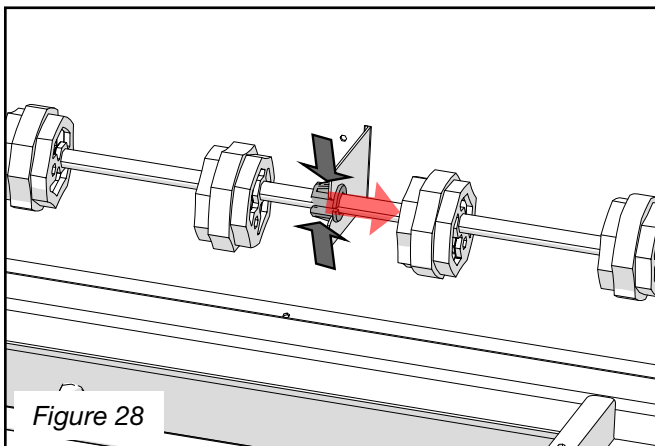
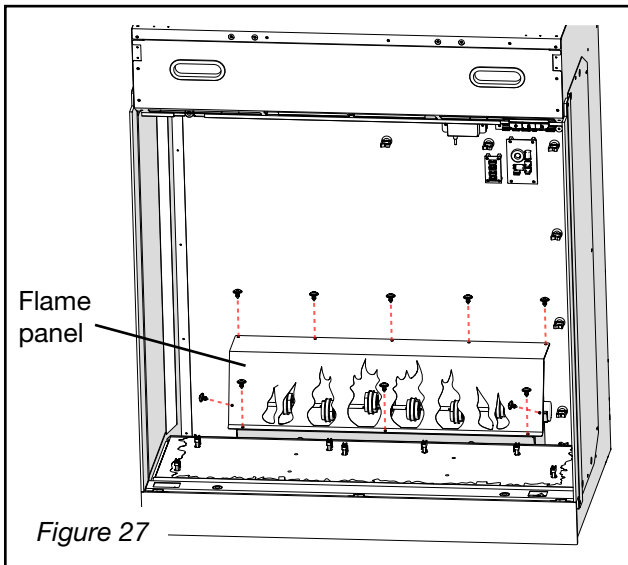


Tools required:

Suction cups (provided with fireplace)
Philips head screwdriver

1. Turn off the power to the fireplace from the electrical panel and follow steps for service behind the mirrored glass.
2. Remove the flame panel.
Note: On larger models there are multiple segments.
3. Carefully pull the flicker rod off the flicker motor.
4. Remove the bushings from the bracket by pinching them and pushing them toward the right. Remove the old flicker rod.
5. Place the new flicker rod, starting by inserting the side with the “mushroom stud” on the left side. Put all the bushings in on the brackets.
6. Reattach the flicker motor to the flicker rod.
7. Reassemble the fireplace.

Flame LED replacement

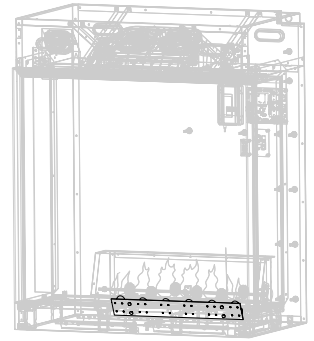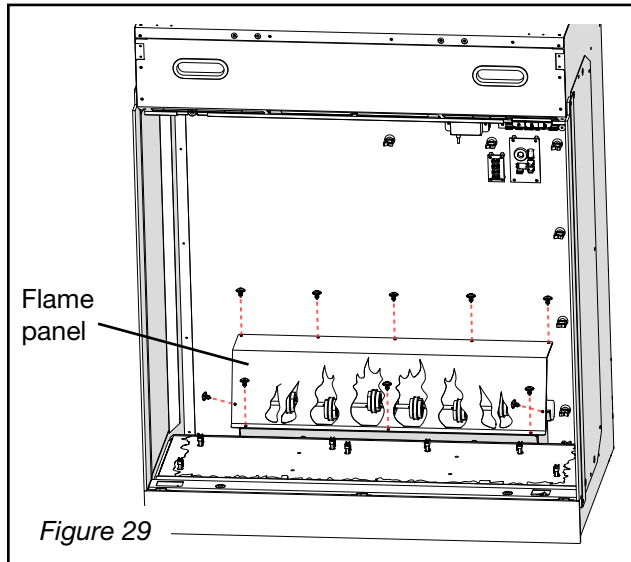


Tools required:

Suction cups (provided with fireplace)
Philips head screwdriver

1. Turn off the power to the fireplace from the electrical panel and follow steps for service behind the mirrored glass.
2. Remove the flame panel.
3. On the flame LED bracket, remove the 4 screws (2 on each side) and the 3 screws at bottom.
4. Pinch standoffs while carefully pulling the LED strip away to remove it. Make note of which side of the LED says IN and OUT.
5. Secure the new LED strip on the standoffs, ensuring that the IN and OUT are oriented correctly and connect the LED strip.
6. Secure the flame LED bracket.
7. Reinstall the flame panel(s).
8. Reassemble the fireplace.

Flicker motor replacement

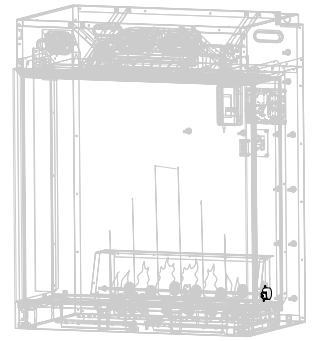

Tools required:

Suction cups (provided with fireplace)
Philips head screwdriver

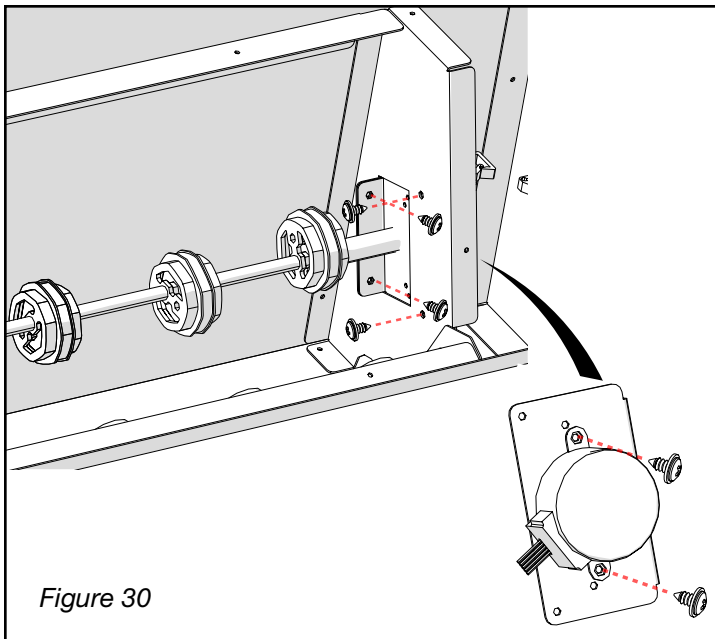


Figure 30

1. Turn off the power to the fireplace from the electrical panel and follow steps for service behind the mirrored glass.
2. Remove the flame panel.
3. Carefully pull the flicker rod off the flicker motor.
4. Remove the four screws on the flicker motor bracket.
5. Remove the two screws to remove the defective flicker motor and replace it with the new flicker motor.
6. Trace the wiring from the defective flicker motor to disconnect it and connect the new flicker motor in its place.
7. Use provided wire ties to bundle wires so that they are not obstructive, and they remain away from where the mirror will be (otherwise they will be visible during operation).
8. Secure the flicker motor bracket.
9. Reinstall the flame panel.
10. Reassemble the fireplace.

Troubleshooting

Problem	Cause	Solution
General		
Circuit breaker trips or fuse blows when unit is turned on	Improper circuit current rating	Install unit on a dedicated minimum 15 amp circuit.
	Short in unit wiring	Trace wiring in unit
Unit does not turn on (using on-board controls)	Power switch in off position	Ensure the rocker switch is in the ON position (I).
	No power to unit	Ensure main disconnect panel and wall switch (if applicable) are on Ensure unit is wired correctly
	Defective on-board controls	Replace on-board controls
	Defective main control board	Replace main control board
Remote control not working	Batteries installed incorrectly	Ensure correct polarity of batteries - Refer to operation manual.
	Batteries are dead	Replace remote control batteries
	Remote control out of range	Bring remote closer to fireplace. Range may be reduced with obstacles between remote and fireplace.
	Remote control not synced	Refer the operation manual for instructions.
	Defective remote control	Replace remote control
	Defective on-board controls	Replace on-board controls
Flame sound is not working	Flame sound not on/not loud enough	Press  and press + repeatedly
	Defective speaker	Replace speaker
	Defective on-board controls	Replace on-board controls
Noise		
Grinding or excessive noise with the heater off	Defective flicker motor	Replace flicker motor
	Flicker rod out of position	Remove mirrored glass and inspect flicker rod.
Excessive noise with the heater on (coming from top center)	Dirty heater assembly	Ensure that exterior louvers are free of dirt/dust. Clean heater assembly with compressed air.
	Defective heater assembly	Replace heater assembly
Flame sound is buzzing	Defective speaker	Replace speaker
Heat		
Heat and fan turn off after a few minutes of operation	Dirty heater assembly	Ensure nothing obstructs the heater, the exterior louvers are free of dirt/dust. Clean heater assembly with compressed air.
	Defective heater assembly	Replace heater assembly
Heater does not turn on and  flashes three times on the on-board controls	Heater disabled	Press and hold  on the on-board controls for 10 seconds to disable or enable the heater.
	Heater permanently disabled	If installation with heat is desired, reinstall jumper on the main board if available or replace it with a new main board or jumper.
Heater does not turn on and  is lit on the on-board controls	Set temperature too low	Change heater setting - Heater will not work beyond 30°C/86°F
	Defective heater assembly	Replace heater assembly
No heat, fan works	Fan only setting - Indicated by blue LED on remote control ( not lit)	Normal operation - change setting to turn on heat
	Cool down	Normal operation
	Defective heater assembly	Replace heater assembly
Heater and fan don't turn on	Defective heater assembly	Replace heater assembly
	Defective main control board	Replace main control board

Flame, lights, and logs		
***If one of any of these features are not working properly, verify that the other features are working properly in order to troubleshoot the cause of failure		
Flame is frozen	Defective flicker motor	Replace flicker motor
	Defective main control board	Replace main control board
No flame	Dusk mode (flame theme 8) is active	Use the remote control or mobile app to select a different flame theme.
	Defective flame LED strip(s)	Replace LED strip(s)
	Defective power supply	Replace power supply (right side - connected directly to main control board)
	Defective main control board	Replace main control board
A portion of the flame is missing	Defective flame LED strip(s)	Replace LED strip(s)
Overhead lights not working	Defective LED strip(s)	Replace LED strip(s)
	Defective splitter board	Replace splitter board
A portion of overhead light is missing	Defective LED strip(s)	Replace LED strip(s)
Ember bed lights not working	Defective LED strip(s)	Replace LED strip(s)
	Defective splitter board	Replace splitter board
A portion of ember bed lights not working	Defective LED strip(s)	Replace LED strip(s)
Ember bed and logs are not lit	Midnight mode (theme 7) is active	Refer to operation section.
No logs are lit (flame and ember bed are on)	Log furthest to the left is defective	Plug a different log into the connector furthest to the left. If it lights up, replace the defective log.
	Defective log expansion board	Replace log expansion board
	Defective main control board	Replace main control board
Some logs are not lit	Defective log	Identify which log is defective by plugging the unlit logs into the connector furthest to the left.
	Logs not plugged sequentially	If all logs work in connector furthest to the left, ensure all wires are plugged into the log expansion board.
	Defective log wire harness	Replace log wire harness
	Defective log expansion board	Replace log expansion board
Ember bed and overhead lights not working	Defective splitter board	Replace splitter board and/or main control board
	Defective main control board	
Logs, ember bed, and overhead lights not working (all or a portion of the flame may be missing as well)	Defective power board	Replace power board, power supply (the one connected to the power board), and/or main control board.
	Defective power supply	
	Defective main control board	

Error Code is displayed (On the Flame Connect app only)	Err 1	Temperature cut-out is activated	Reset breaker and wait 5 minutes before turning unit back on it. If error persists, see Service Manual.
	Err 12	Ambient temperature is above 45° C (113° F)	No action required.
	Err 13	Ambient temperature is below 5° C (41° F)	No action required.
	Err 16	NTC not detected	See service manual.

1-888-346-7539 | www.dimplex.com

In keeping with our policy of continuous product improvement, we reserve the right to make changes without notice.

© 2024 Glen Dimplex Americas

