

TruWood™ Premium Timber

96"-120", TruWood Premium Timber Kit, Large

Part Number:
TWL-96/120-SP

INSTALLATION GUIDE

TruWood Premium Timber Kit models: LPM-9616V2,
OR100-MULTI, OR120-MULTI, LPM-12016V2.

TruWood Premium Timber Kit includes:

- 16" Large logs (5).
- 12" Big logs (4).
- 12" Slim logs (2).
- 10" logs (7).
- 8" accent log (1).
- Bag of wood chips (1).

Assembly order

You will need to gain access to the ember bed of your fireplace. Refer to your fireplace manual for instructions for removing the front glass to access the ember bed.

Please Note: This kit is designed to fit multiple fireplaces sizes. Your log set might be more spread out for linear fireplaces or more compact for traditional fireplaces. If your fireplace is one of the smaller units this kit is compatible with, you may not need to use all the logs based on the available space of your fireplace.

The placement is what we recommend and what we optimized the set to, but you can have fun with them and place them to your liking. We recommend placing the bark towards the flames for the best appearance and lighting contrast.

1. Ensure the ember bed media (crystals, fireglass, etc.) that came with the fireplace is installed first. If updating an existing fireplace, remove the old logs to accommodate the TruWood logs. Then select the 16" log from the kit and place it in the middle of the fireplace. This will be the base of the TruWood log layout.




2. Select the two 16" side logs and rest them on the left and right of the base log. These are now creating the main portion of your stack. Spreading these out more for linear shaped fireplaces.




Assembly order

3. Select the 12" big logs, and stack these on the ends of the 16" logs.

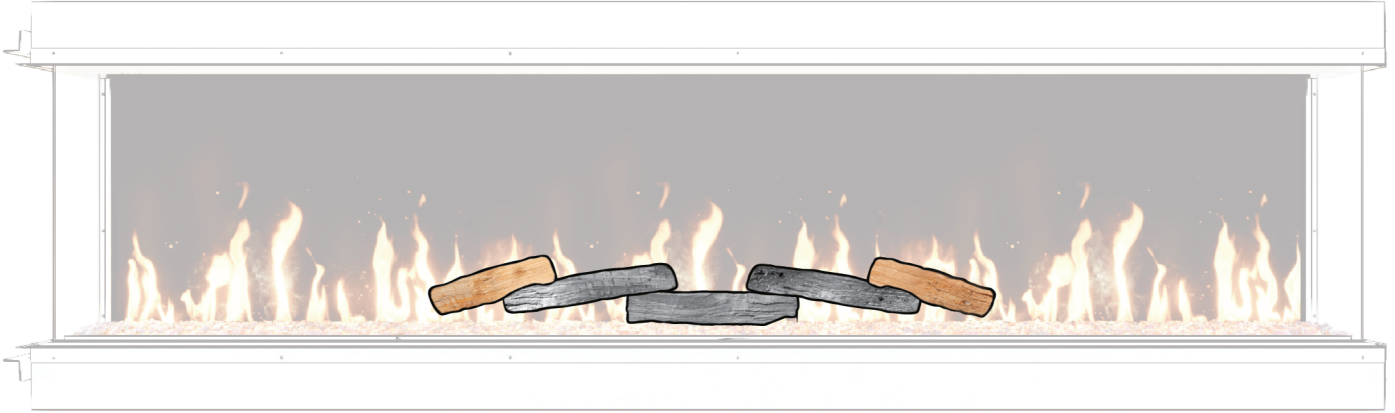

4. Select the 12" slim logs and stack these on the ends of the 12" big logs.

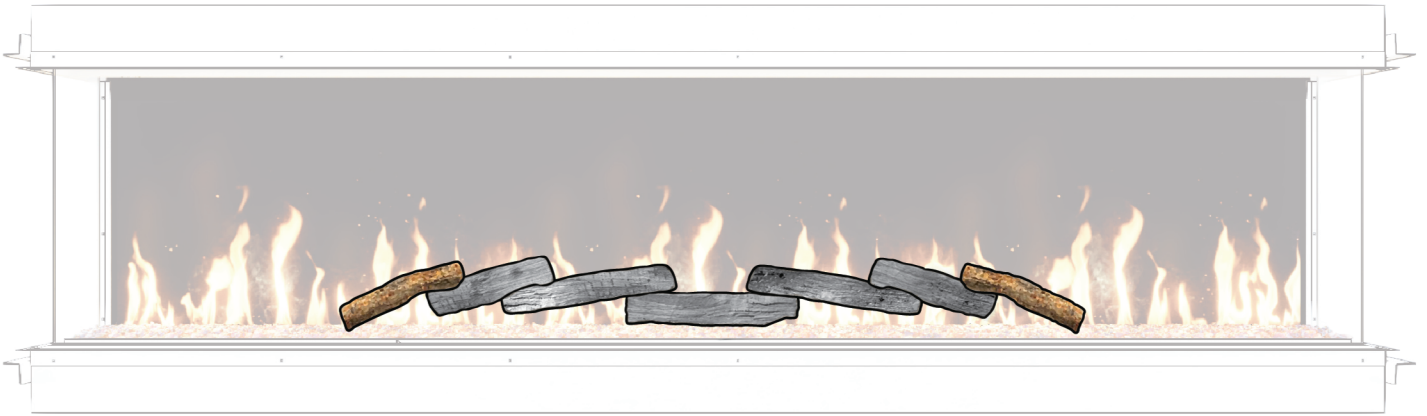

5. Select the last two of the 16" Accent logs, and rest them on the left and right of the 12" slim logs. The 16" filler logs should be resting on the ember bed.




Assembly order


6. Select the last two of the 12" big logs, and lay these near the 16" filler logs. The inside end of the log may be towards you and the outside end may be towards the flame screen.



7. Select 8" accent log and lay them under the 16" Side logs previously stacked, crossing directions where possible.

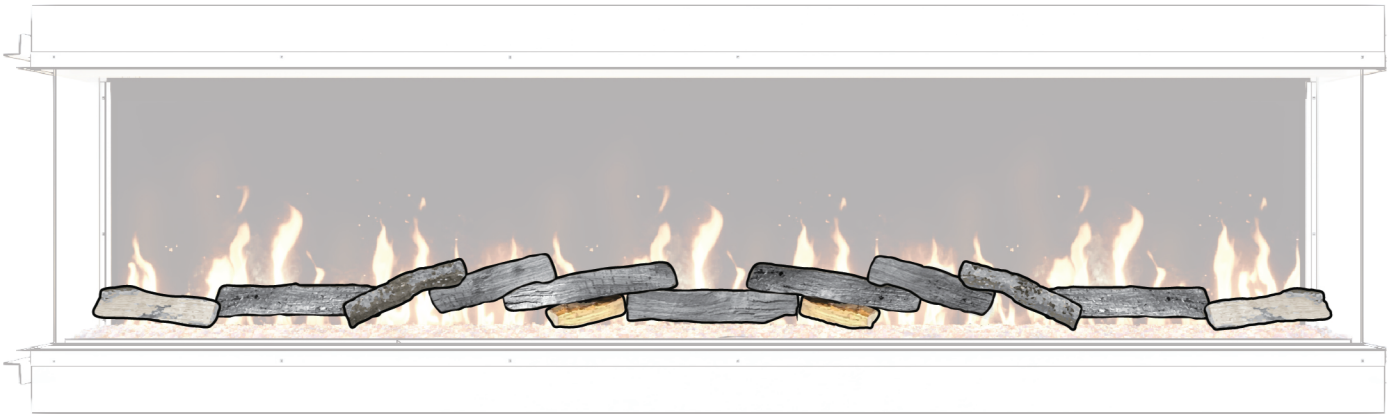


8. Select the 10" logs, and stack these laying under the 12" slim logs.

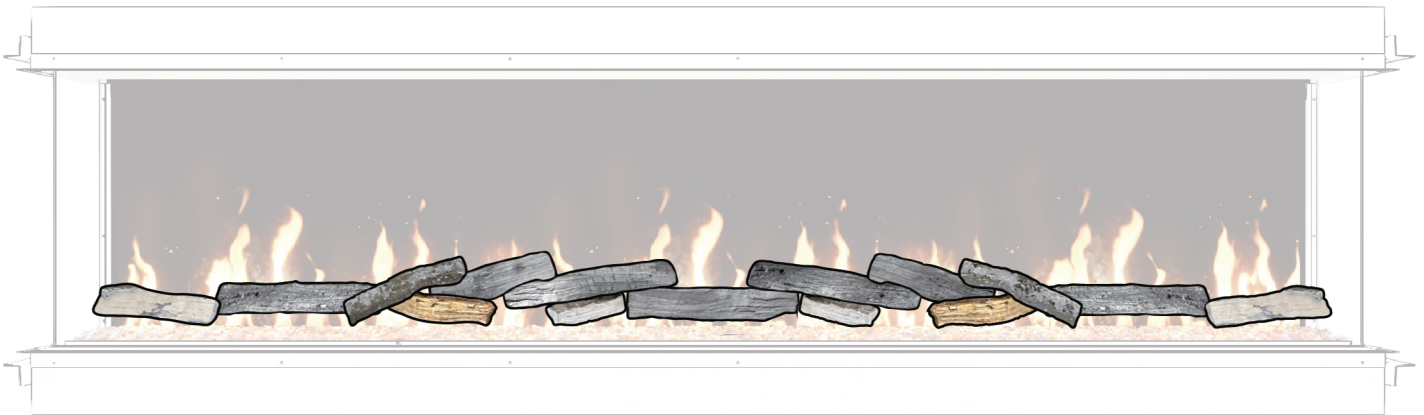


Assembly order

9. Select the 10" logs, and stack these laying over the 16" filler logs. The inside end of the log may be towards you and the outside end may be towards the flame screen.

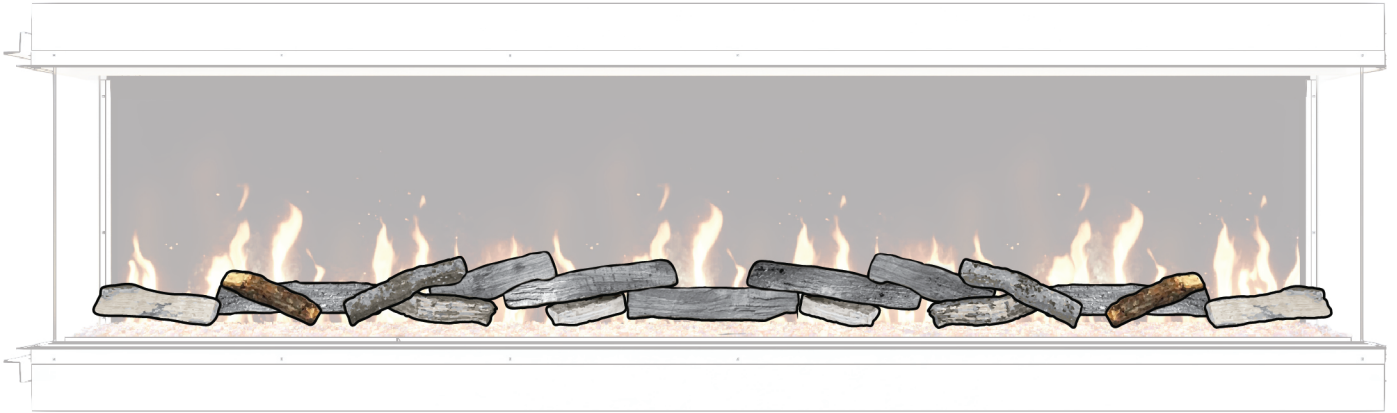

10. Select the last two 10" logs, and stack these laying over the 12" big logs. The inside end of the log may be the he flame screen and the outside end may be towards you.

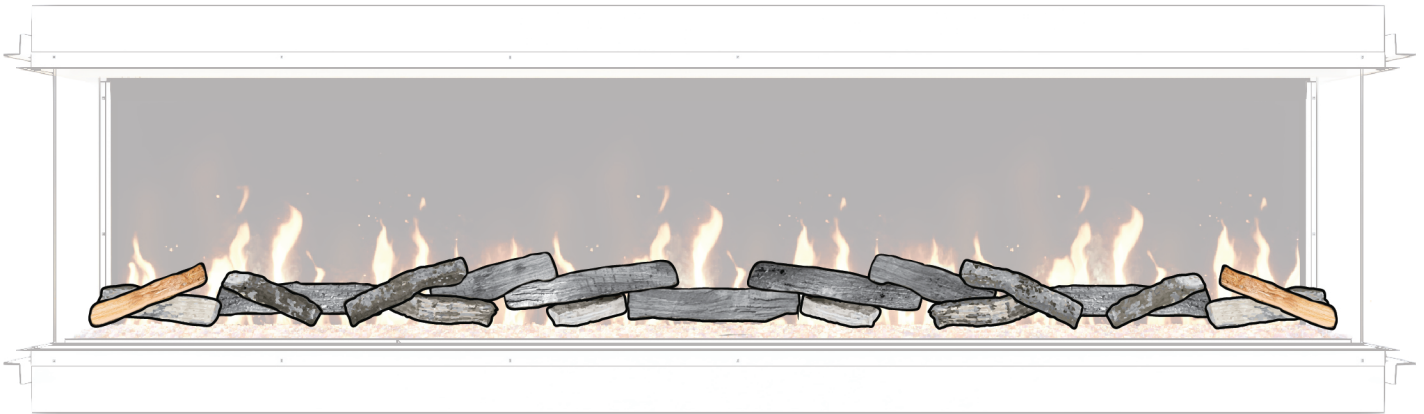

11. Select 10" center accent log and lay it across the main log diagonally.



Assembly order

12. Use the bag of wood chips and place a few chips and chunks in the gaps between the logs. We recommend using these sparingly for the best appearance and to maximize the light output from the ember bed.



96"-120", TruWood Premium Timber Kit, Large installation is complete.

MODERN FLAMES®

ELECTRIC FIREPLACES

Thank you for choosing Modern Flames, we appreciate all our customers and hope you have many years of enjoyment of our products.

Take a look at our other products from our RPG Brands family of companies



GrandCanyonGasLogs.com

For all your indoor, outdoor gas fireplaces & fire feature products.



WildfireOutdoorLiving.com

For all your outdoor living products, such as grills, refrigerators and accessories.

RPG BRANDS

