

TruWood™ Premium Timber

56"-60", TruWood Premium Timber Kit, Slim

Part Number:
TWS-56/60-SP

INSTALLATION GUIDE

TruWood Premium Timber Kit models:
LPS-5614V2, OR60-SLIM.

TruWood Premium Timber Kit includes:

- 12" Slim logs (4).
- 8" Slim logs (3).
- 8" Twigs (2)
- 6" Twig (1).
- Bag of wood chips (1).

Assembly order


You will need to gain access to the ember bed of your fireplace. Refer to your fireplace manual for instructions for removing the front glass to access the ember bed.

Please Note: This kit is designed to fit multiple fireplace sizes. Your log set might be more spread out for longer fireplaces or more compact for the shorter fireplaces. If your fireplace is one of the smaller units this kit is compatible with, you may not need to use all the logs based on the available space of your fireplace.

For Pro Slim series you will want to make sure the stack does not get too high so there is enough room for the glass face.

The placement is what we recommend and what we optimized the set to, but you can have fun with them and place them to your liking. We recommend placing the bark towards the flames for the best appearance and lighting contrast.

1. Ensure the ember bed media (crystals, fireglass, etc.) that came with the fireplace is installed first. If updating an existing fireplace, remove the old logs to accommodate the TruWood Slim logs. Then select one of the 8" slim logs from the kit and place it in the middle of the fireplace. This will be the base of the TruWood log layout.

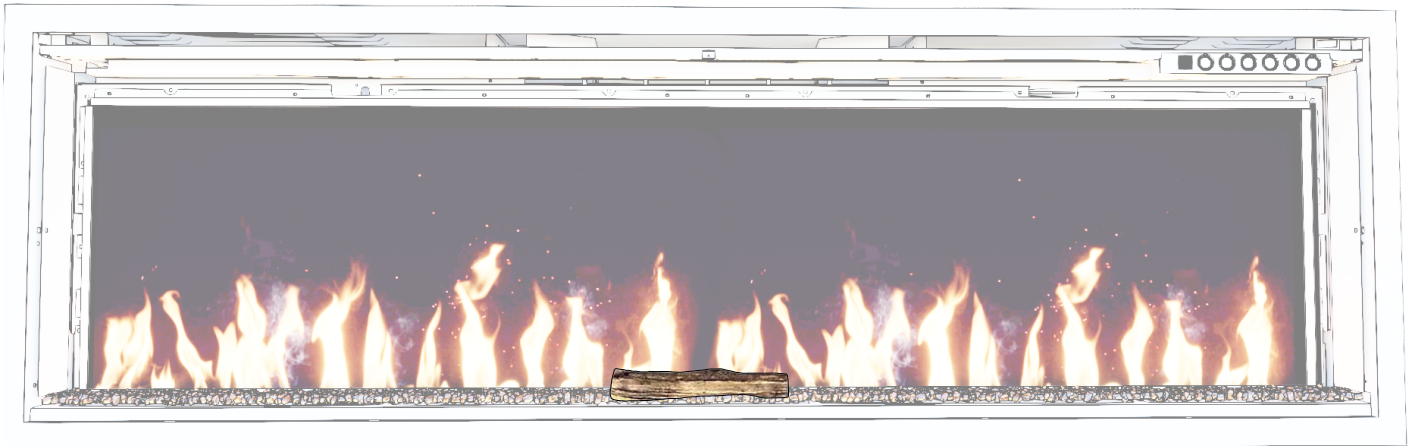

2. Select the two 12" slim logs and rest them on the left and right of the base log. These will create your main stack. Spread the logs out more for longer fireplaces and bring them closer for shorter fireplaces.



Assembly order

3. Select the two 8" slim logs, and stack these on the ends of the 12" logs.



4. Select the last two 12" slim logs, and rest them on the 8" logs corner.




Assembly order

5. Select the 8" twigs, and lay these on top of the first pair of 12" slim logs previously stacked. Note that adding the twigs is optional.



6. Select the 6" twig and lay it across the 8" central log diagonally.

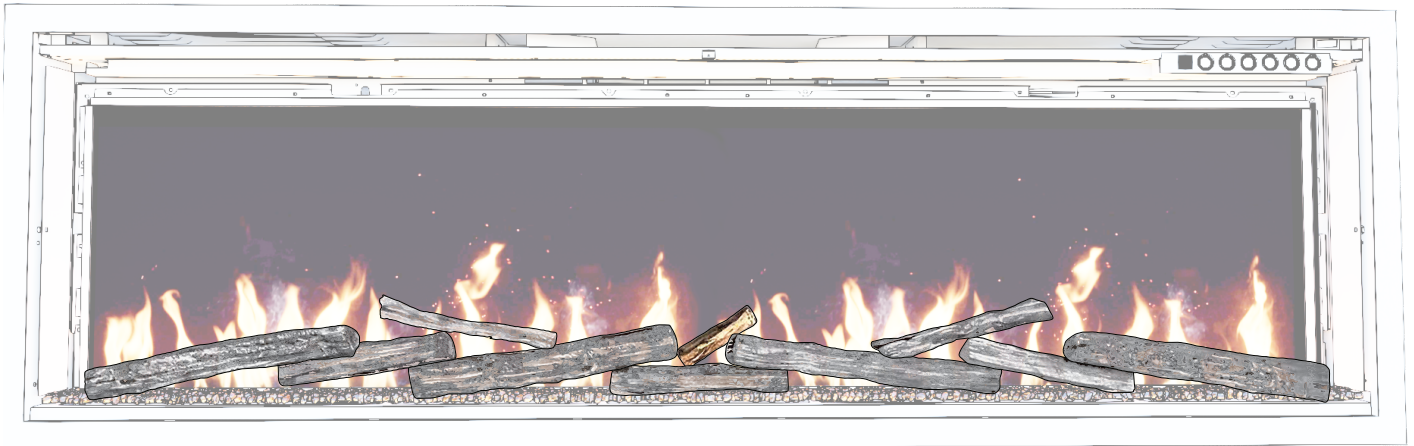

Assembly order

7. Use the bag of wood chips and place a few chips and chunks in the gaps between the logs. We recommend using these sparingly for the best appearance and to maximize the light output from the ember bed.



Note, that for Landscape Pro Slim series you will want to test fit the glass and adjust any logs as needed.



56"-60", TruWood Premium Timber Kit Slim, installation is complete.

MODERN FLAMES[®] ELECTRIC FIREPLACES

Thank you for choosing Modern Flames, we appreciate all our customers and hope you have many years of enjoyment of our products.

Take a look at our other products from our RPG Brands family of companies



GrandCanyonGasLogs.com

For all your indoor, outdoor gas fireplaces & fire feature products.



WildfireOutdoorLiving.com

For all your outdoor living products, such as grills, refrigerators and accessories.

RPG BRANDS

