

TruWood™ Premium Timber

80"-100", TruWood Premium Timber Kit, Slim

Part Number:
TWS-80/100-SP

INSTALLATION GUIDE

TruWood Premium Timber Kit models:
LPS-8014V2, LPS-9614V2, OR100-SLIM.

TruWood Premium Timber Kit includes:

- 12" Slim logs (6).
- 10" Slim logs (2).
- 8" Slim logs (3)
- 6" Slim logs (2)
- 8" Twigs (4)
- 6" Twig (3).
- Bag of wood chips (1).

Assembly order

You will need to gain access to the ember bed of your fireplace. Refer to your fireplace manual for instructions for removing the front glass to access the ember bed.

Please Note: This kit is designed to fit multiple fireplace sizes. Your log set might be more spread out for longer fireplaces or more compact for the shorter fireplaces. If your fireplace is one of the smaller units this kit is compatible with, you may not need to use all the logs based on the available space of your fireplace.


For the Pro Slim series, you will want to make sure the stack does not get too high so there is enough room for the glass face.

The placement is what we recommend and what we optimized the set to, but you can have fun with them and place them to your liking. We recommend placing the bark towards the flames for the best appearance and lighting contrast.

1. Ensure the ember bed media (crystals, fireglass, etc.) that came with the fireplace is installed first. If updating an existing fireplace, remove the old logs to accommodate the TruWood Slim logs. Then select one of the 8" slim logs from the kit and place it in the middle of the fireplace. This will be the base of the TruWood log layout.




2. Select the two 12" slim logs and rest them on the left and right of the base log. These will create your main stack. Spread the logs out more for longer fireplaces and bring them closer for shorter fireplaces.

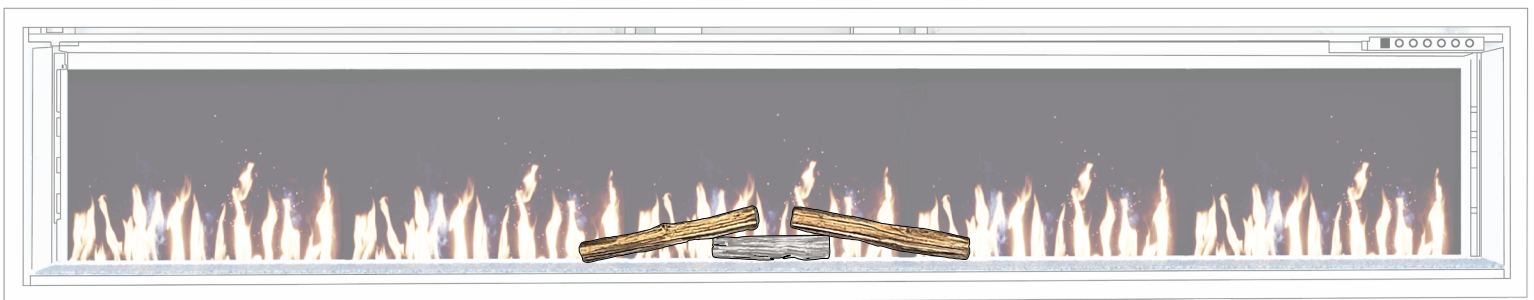

Assembly order

3. Select the two 8" slim logs, and stack these on the ends of the 12" logs.

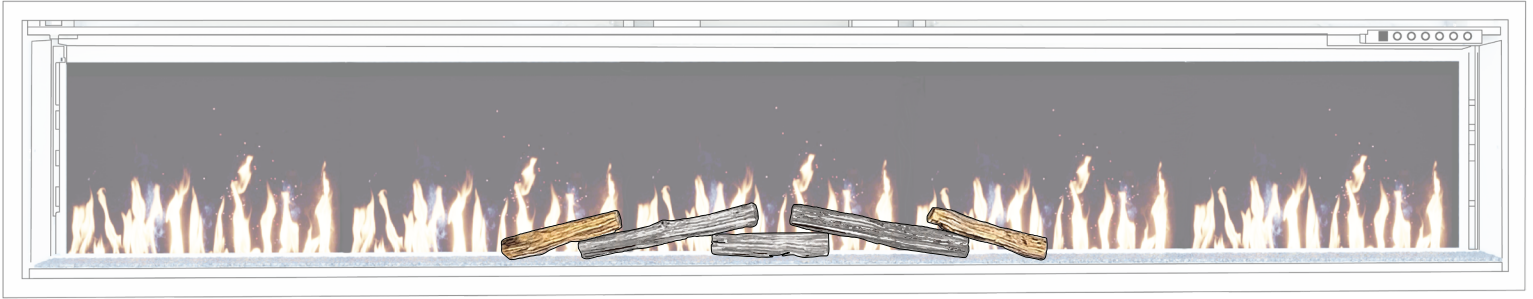

4. Select two 12" slim logs, and rest them on the 8" logs corner.



5. Select the two 10" slim logs, and stack these on the ends of the 12" logs.



Note: For LPS-8014V2 follow steps 6a-10a. For LPS-9614V2 and OR100-SLIM follow steps 6b-12b.

Assembly order

For LPS-8014V2

- 6a. Select two 6" slim logs and rest these on the corner of the the 10" slim log.



- 7a. Select two 8" twigs and lay these on top of the second pair of 12" slim logs .




- 8a. Select the last two 8" twigs and lay these on top of the first pair of 12" slim logs.



Assembly order

- 9a. Select the 6" twig and lay it across the 8" central log diagonally.

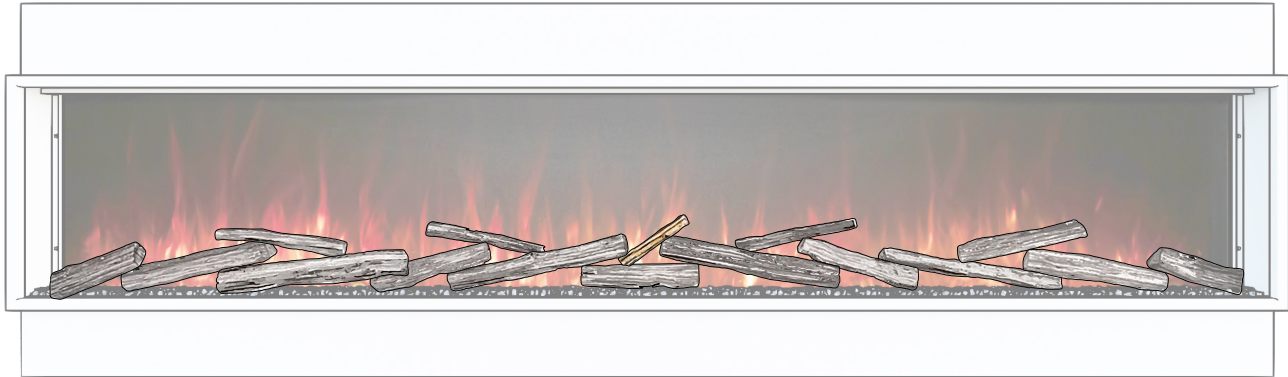

- 10a. Use the bag of wood chips and place a few chips and chunks in the gaps between the logs. We recommend using these sparingly for the best appearance and to maximize the light output from the ember bed.



Note, this kit was made for three different models, for the LPS-8014V2 you will end up with a spare of two 12" slim logs and two 6" twigs.




80", TruWood Premium Timber Kit Slim, installation is complete.

Assembly order

For LPS-9614V2 and OR100-SLIM

- 6b. Select the last two 12" slim logs and rest them on the 10" logs corner.

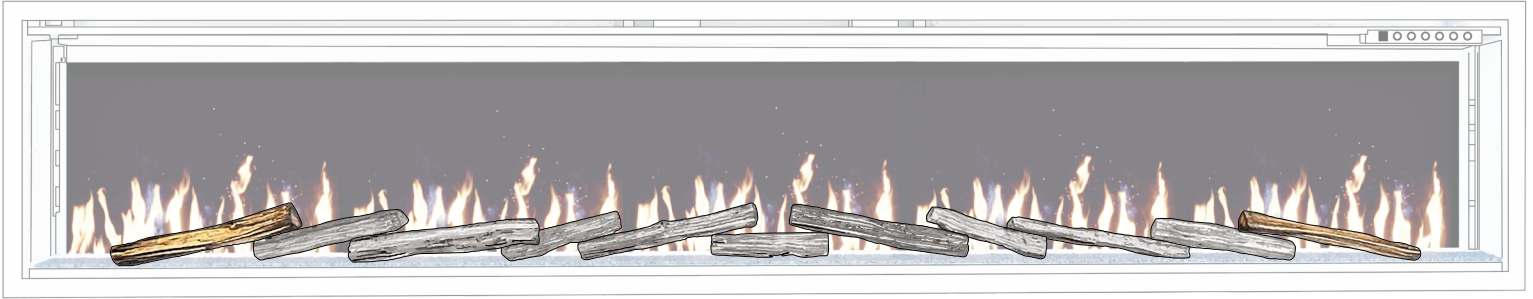

- 7b. Select the two 6" slim logs and rest them on the 12" logs corner.



- 8b. Select two 6" twigs and lay these on top of the 12" slim logs previously stacked. Note that adding the twigs is optional.




Assembly order


9b. Select two 8" twigs and lay these on top of the second pair of 12" slim logs .



10b. Select the last two 8" twigs and lay these on top of the first pair of 12" slim logs .

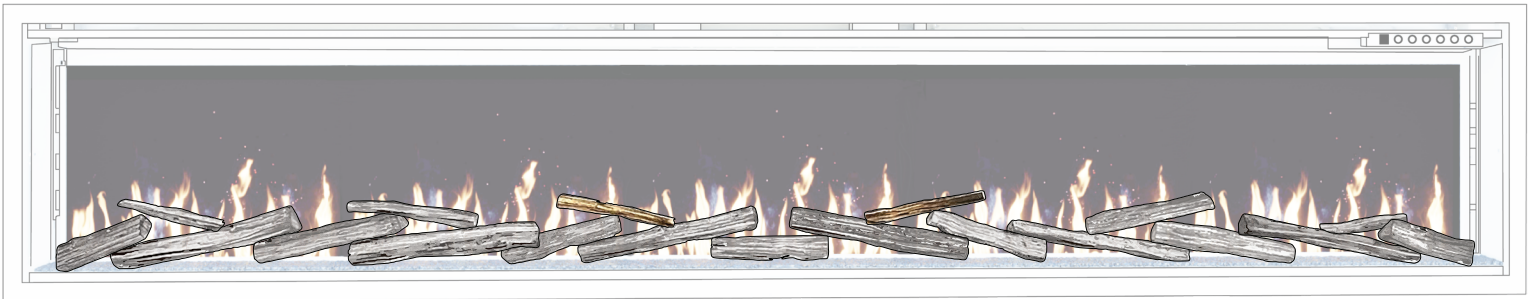


11b. Select the 6" twig and lay it across the 8" central log diagonally.

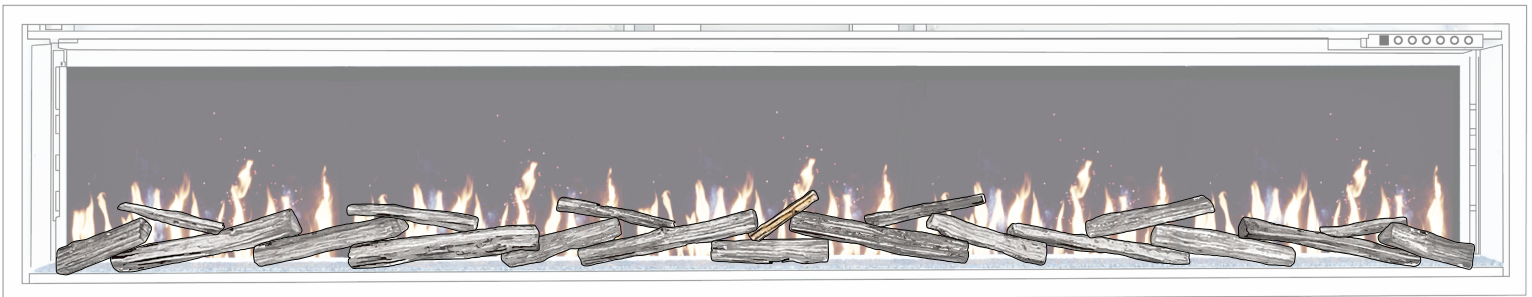

Assembly order

- 12b. Use the bag of wood chips and place a few chips and chunks in the gaps between the logs. We recommend using these sparingly for the best appearance and to maximize the light output from the ember bed.

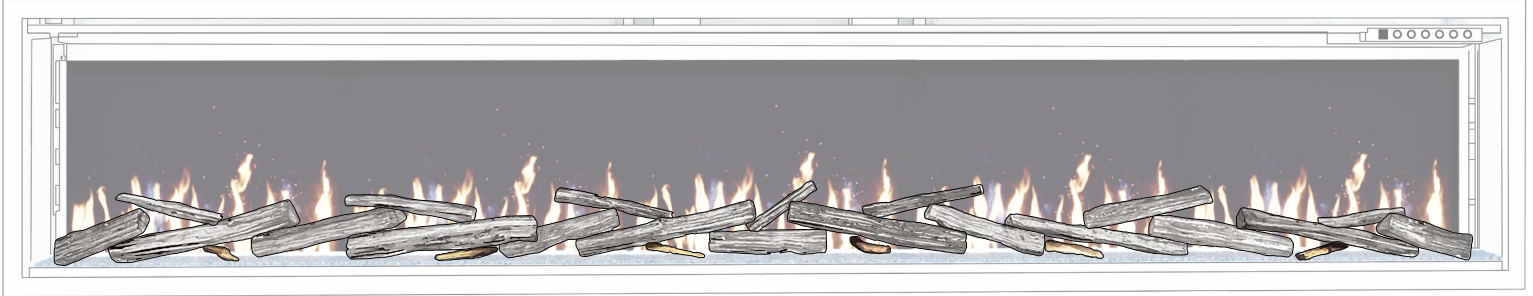

Note, that for the Landscape Pro Slim series, you will want to test fit the glass and adjust any logs as needed.



96"-100", TruWood Premium Timber Kit Slim, installation is complete.

Notes

Note: These are real wood logs and will vary in appearance

MODERN FLAMES® ELECTRIC FIREPLACES

Thank you for choosing Modern Flames, we appreciate all our customers and hope you have many years of enjoyment of our products.

Take a look at our other products from our RPG Brands family of companies



GrandCanyonGasLogs.com

For all your indoor, outdoor gas fireplaces & fire feature products.



WildfireOutdoorLiving.com

For all your outdoor living products, such as grills, refrigerators and accessories.

RPG BRANDS

